

.....



QuickLock Ramps
12662 Corral Place Santa Fe Springs CA 90670
Ph: 562.906.6185 Fax: 562.906.6186
www.rampoutfitters.com

V1.0 - 4.10.13

QuickLock Ramps



Universal Ramps

by IntelliStage

Contents

Introduction	1
About QuickLock Ramps	2
Meet the Ramp Componets	3,4
Assembly of Legs to Platforms	5,6
Leg Adjustment.....	7
Installation of Leg Braces	8
Assembly of Ramp to Top Landing	9,10,11
Assembly of Ramp to Middle Landing	12,13,14
Assembly of Bottom Plate to Ramp	15
Installation of Ramp to Intellistage	16,17,18
Installation of Ramp to QuickLock Stages.....	19,20,21
Installation of Ramp to ProFlex Stages	22,23,24
Installation of Ramp to All Terrain Stages	25,26
Installation of Ramp to Staging 101 Stages	27,28
Installation of Ramp for Other Installations	29,30
General Guardrail Assembly.....	31,32
Guardrail Assembly of RAGRD4, RASGRD & QLGRS4.....	33,34,35,36,37,38,39
Guardrail Assembly for Intellistage.....	40,41
Guardrail Assembly for QuickLock Stages.....	42,43
Guardrail Assembly for ProFlex Stages.....	44,45
Guardrail Assembly for All-Terrain Stages.....	46,47
Guardrail Assembly for Staging 101 Stages.....	48,49
Ramp Models and Configurations..	50,51,52,53,54,55,56,57,58,59,60,61,62, 63, 64, 65



Introduction

Thank you for being a QuickLock Ramp customer and welcome to the family.

We do one thing and do it well – build products that make your life easier. Crafting innovative, quality products is our calling and we take it seriously. Strong, modular and versatile, your ramp system is crafted out of the finest materials available and put through our grueling quality check before it ships out the door.

We thank you for your purchase and know that your QuickLock ramp system will definitely steal the show! However, if you should require any assistance or service, you'll find that we take as much pride in supporting our products as we do in designing and building them.

About QuickLock Ramps

- Wheelchair (ADA) and Equipment configurations up to the 48" (120cm).
- Metric and Imperial sizes are available.
- Available in two surface finishes: Industrial finish and Aluminum finish.
- Aluminum finish ramps are fully water proof and are suitable for permanent outdoor installation.
- Flexible and adjustable configurations fit a variety of different needs.
- Straight, 90 degree angle and switch back wheel chair ramp configurations are available.
- Equipment ramps with or without landings are available.
- Can be installation on leveled, flat ground surfaces and uneven surfaces.
- Universal design easily connects to the following stages; IntelliStage, Staging 101, Slim Folding Stage 101, All Terrain, ProFlex, QuickLock and or fixed permanent structures.
- Ramps can be installed onto any permanent structure (such as a house) using a custom designed adapter.
- Easy, fast and simple to install using standard QuickLock platforms and guardrails.
- Fast assembly and installation does not require any additional tools
- Custom ramp configurations can be created to fit your needs.

Weight load rated at: 750 KG / SQ M (153 LBS /SQ FT).



Important Safety Instructions:


- 1.) Read and follow all instructions
- 2.) Do not exceed the maximum weight capacity
- 3.) Completely secure all panels and hardware

MEET THE IMPERIAL RAMP COMPONENTS

Platforms




QLP4I, QLP4AL

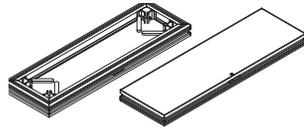


RPS4I, RPS4AL


Legs

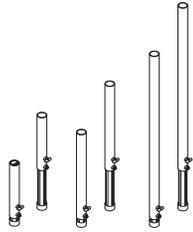

QLTL1 THRU QLTL3

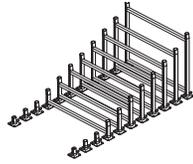


RL1W THRU RL11W

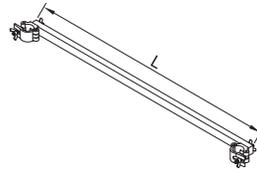


RLBD OR RLBDL

Bottom Plates

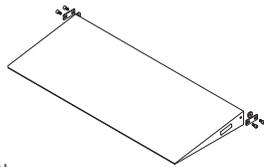


RBP, RBFAL


Connecting Panels

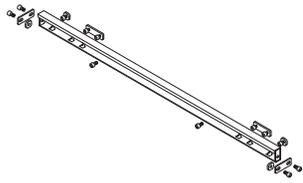

RUCP, RUCPAL

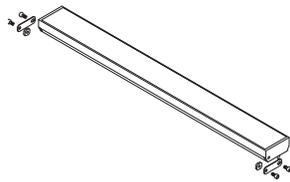


RUCPAT, RUCPATAL

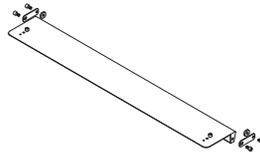


URAMPADAPT, URAMPADAPTAL

Guardrails

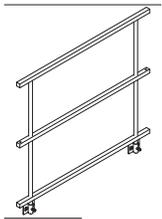

QLGRD4, QLGRS4

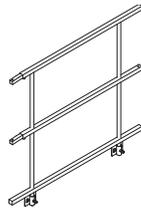


RAGRD4




RASGRD

Guardrails


QLAI, QLDAI

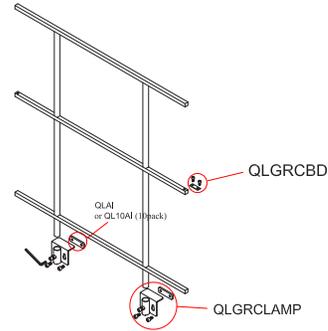

QLGRCLAMP, QLAGRCLAMP

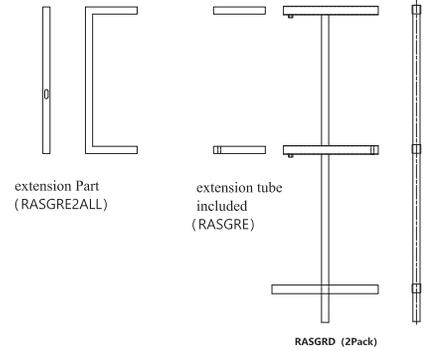


RASGRE/RASGRD

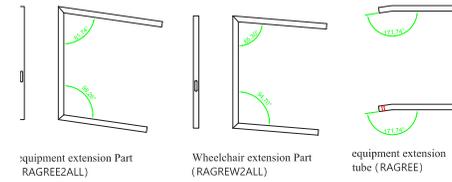

equipment extension Part (RAGREE2ALL)

Wheelchair extension Part (RAGREW2ALL)


equipment extension tube (RAGREE)

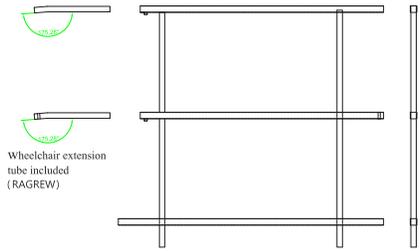


RAGRD4 (2pack)

RAGREE2ALL, RAGREW2ALL, RAGREE, RAGREW


Hardware




RAGRMB2AT

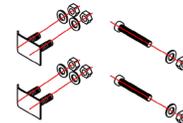

RAGRMB2IS




RAGRMB2PF



QLGRCLAMP


Leg ramp options shown. Your leg sizes will vary depending on the type of ramp you have. Please refer to the ramp model drawings at the back of this manual to find your ramp leg configuration.

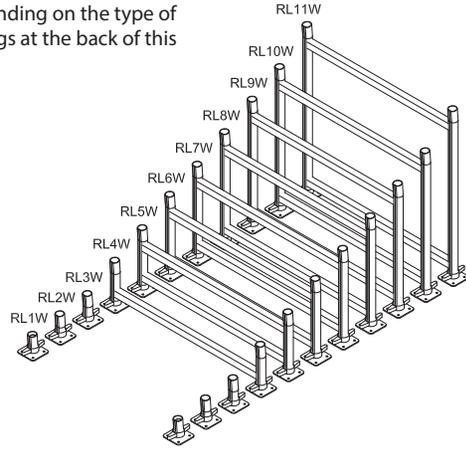


ASSEMBLY OF LEGS TO PLATFORMS

How to attach RL1W legs to ramp platforms

Figure 1

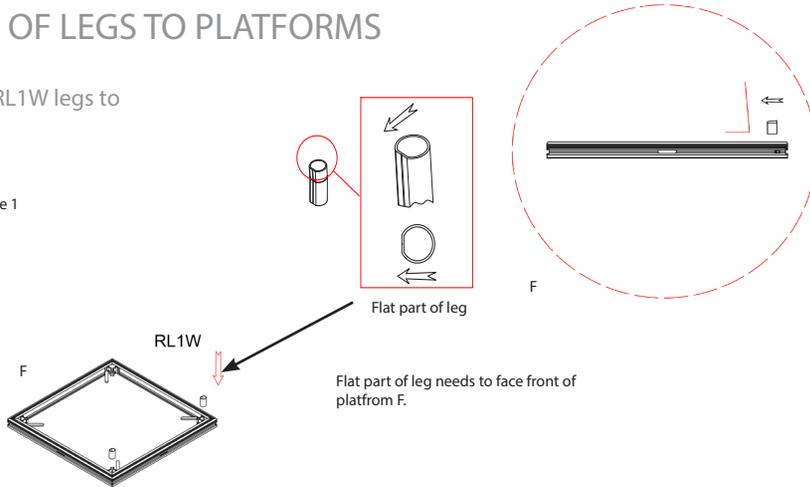


Start with platform upside down and with Quick Lock mechanisms open as shown in step 1. Place legs into the locking mechanisms of platform as shown in step 2. The flat part of the leg needs to face the front of the platform F as shown in Figure 1. Close the Locking mechanism to secure legs into the bottom of the platform as shown in step 2. Set platform right side up and place onto height adjustable feet as shown in steps 3 and 4.

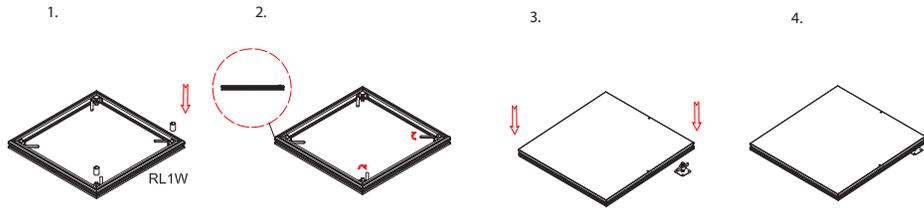


How to attach RL2W and RL3W legs to ramp platforms

Figure 2

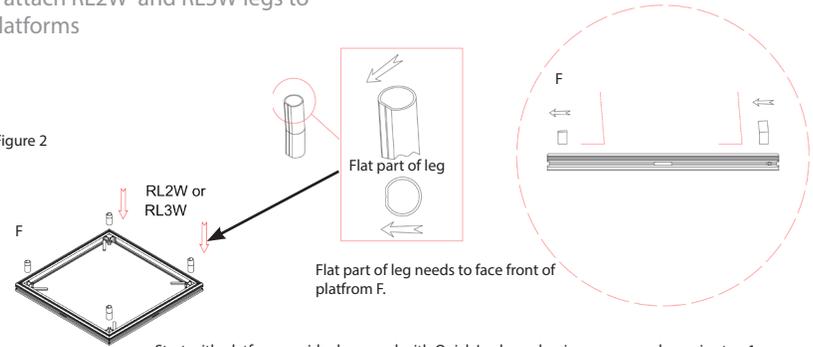


Start with platform upside down and with Quick Lock mechanisms open as shown in step 1. Place legs into the locking mechanisms of platform as shown in step 2. The flat part of the leg needs to face the front of the platform F as shown in figure 2. Close the Locking mechanism to secure legs into the bottom of the platform as shown in step 2. Set platform right side up and place onto height adjustable feet as shown in steps 3 and 4.

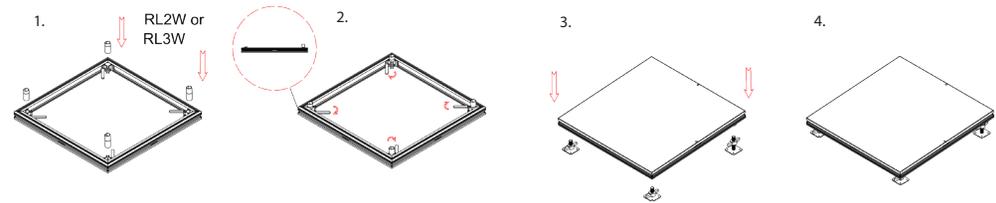


How to attach RL4W to RL11W legs to ramp platforms

Figure 3

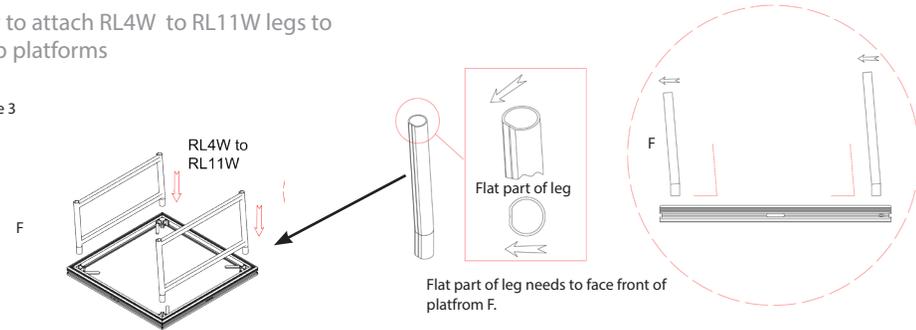


Start with platform upside down and with Quick Lock mechanisms open as shown in step 1. Place legs into the locking mechanisms of platform as shown in step 2. The flat part of the leg needs to face the front of the platform F as shown in figure 3. Close the Locking mechanism to secure legs into the bottom of the platform as shown in step 2. Set platform right side up and place onto height adjustable feet as shown in steps 3 and 4.

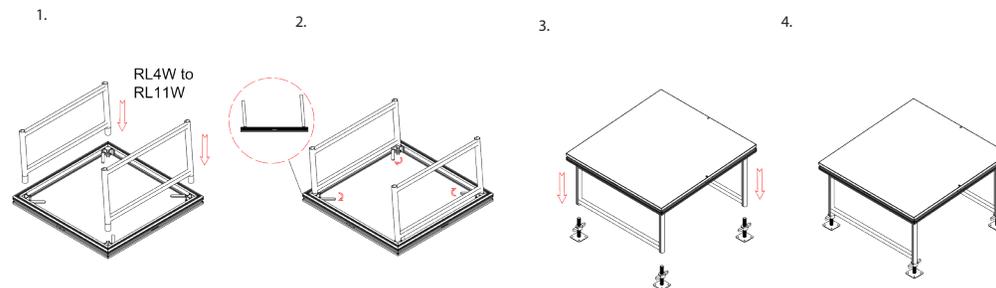

LEG ADJUSTMENT

Place separate platforms to form your ramp. Do not lock platforms together at this time. Adjust bottom of ramp legs by turning the leg mechanism as shown below to set the ramp evenly. Please refer to your specific ramp configuration shown at the back of this manual. Once the ramp is leveled and all legs are adjusted lock the platforms together with hex key shown in figure 4.

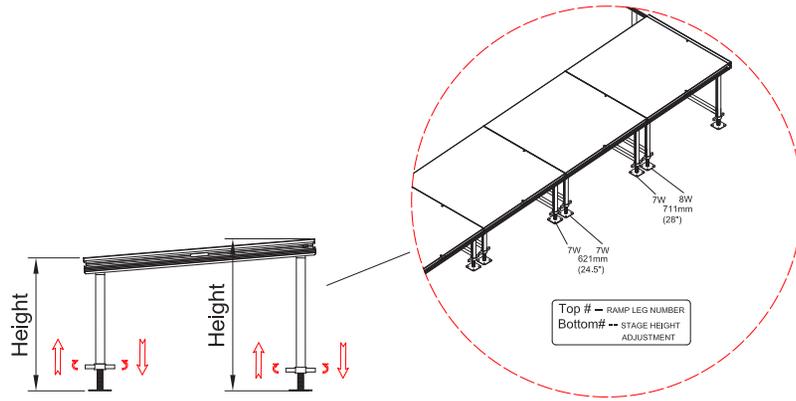

Adjust bottom of ramp legs by turning

Once the ramp is leveled and all legs are adjusted lock the ramps together using hex key as shown below


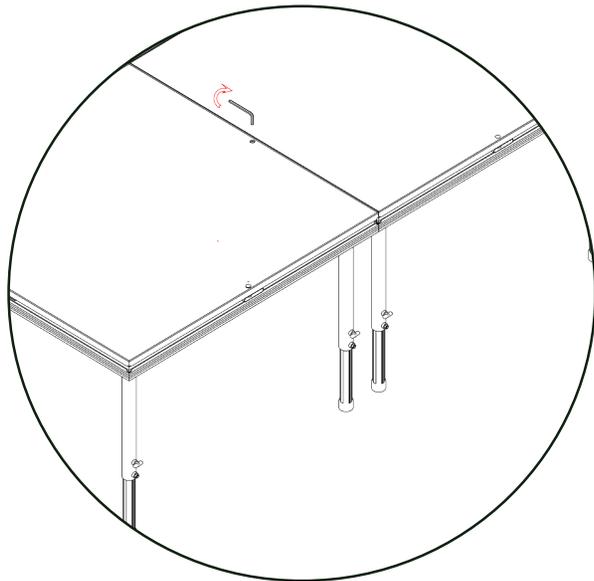



Figure 4

INSTALLATION OF LEG BRACES


For ramps set higher than 32" (80 cm) the use of leg braces RLBD and RLBD is required to stabilize the ramp. Please refer to your ramp configuration at the back of this manual to see where braces are needed. Leg braces could be attached as shown below using the mounting hardware provided.

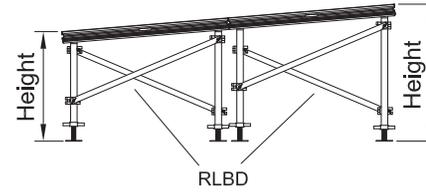

Height between 80cm(32") and 100cm(40") should use RLBD

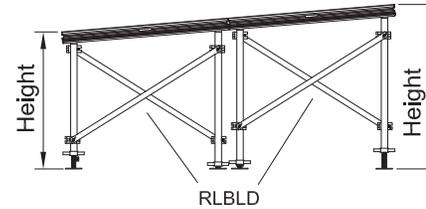

Height between 100cm(40") and 120cm(48") should use RLBD

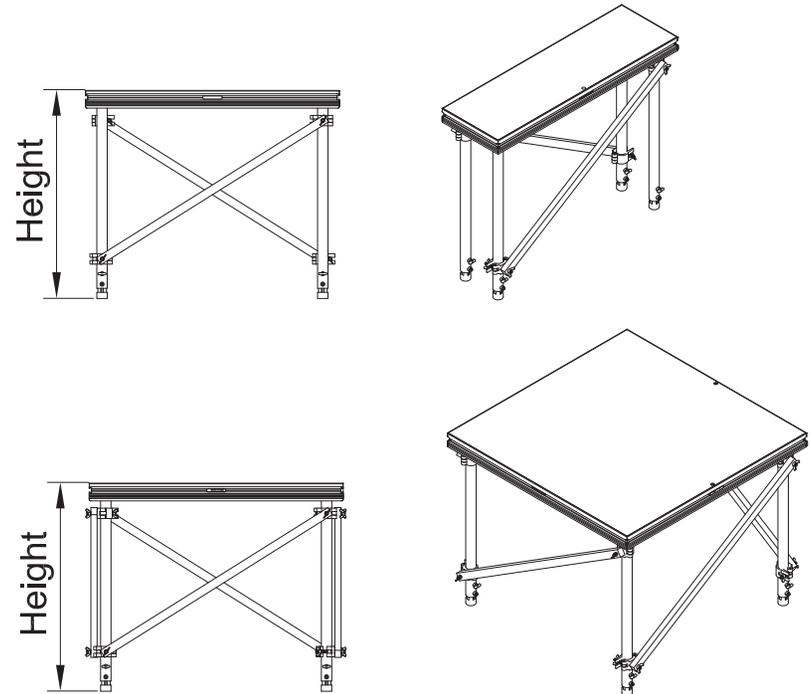

ASSEMBLY OF RAMP TO TOP LANDING

Create the top landing as shown in figure 10 by adding multiple platforms and locking them using the hex key. Please refer to your specific ramp configuration shown at the back of this manual.

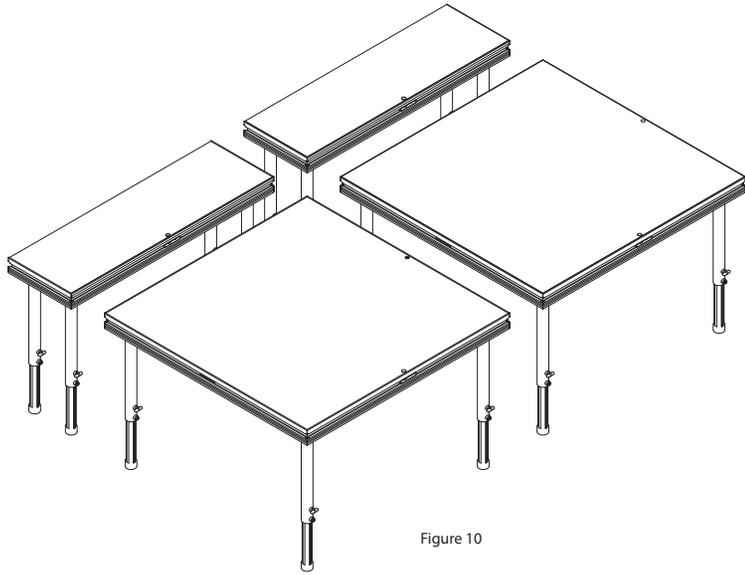


Figure 10

Install the stage connecting panel (RUCP or RUCPAL) to ramp top landing platform using the hardware provided as shown in figure 11



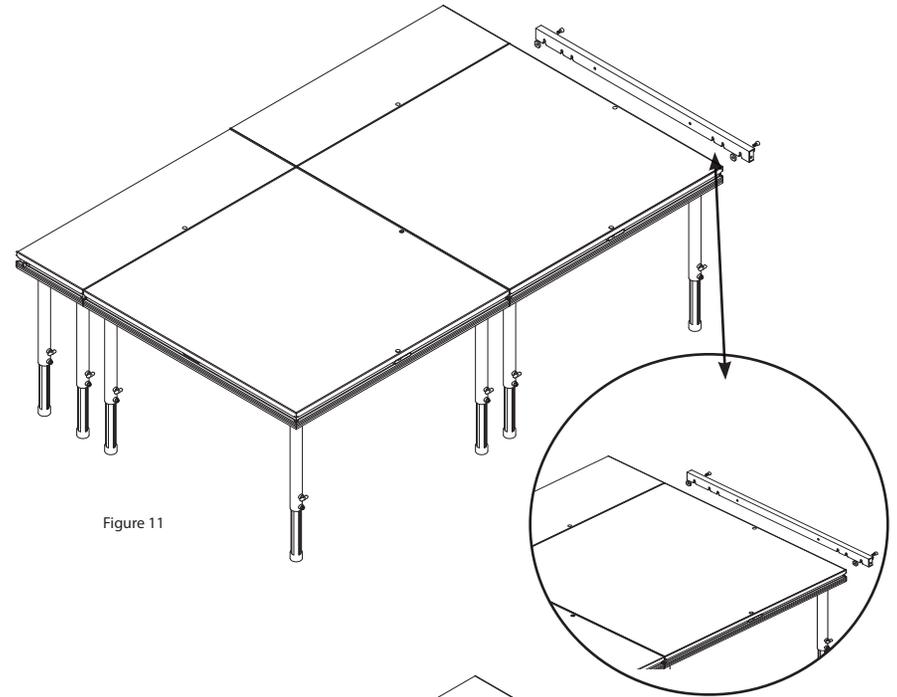


Figure 11

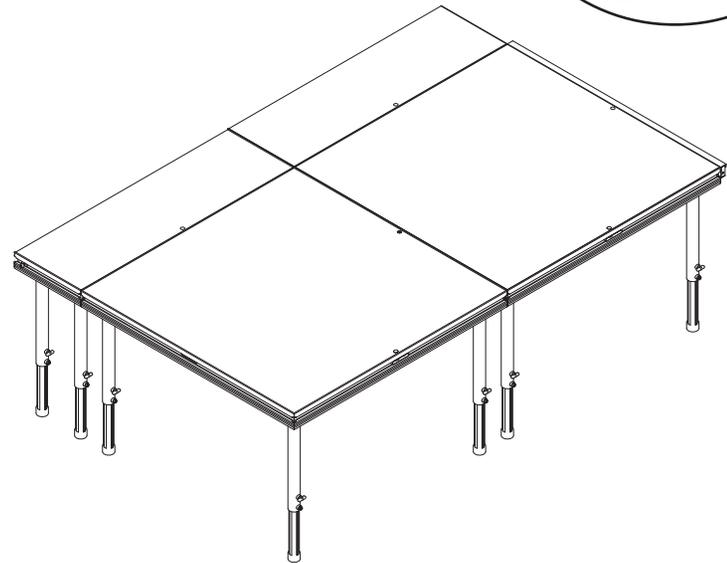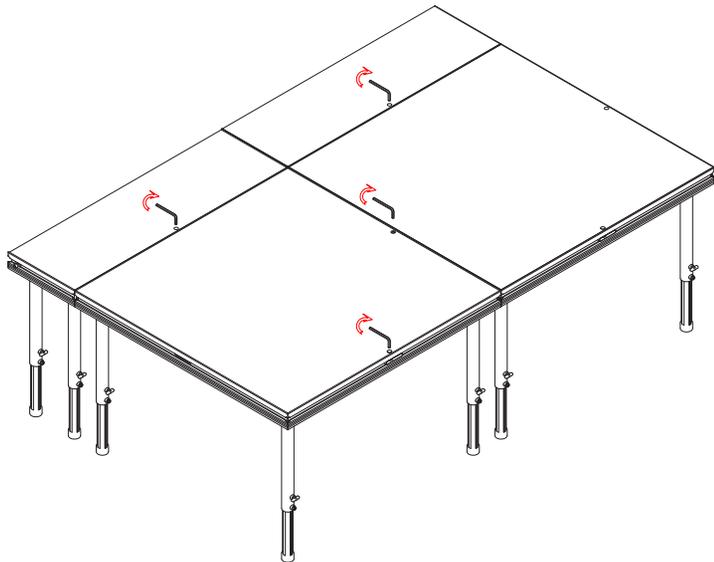

Next attach the platform with the installed stage connecting panel (RUCP or RUCPAL) to the top ramp platform with provided hardware as shown in figure 12


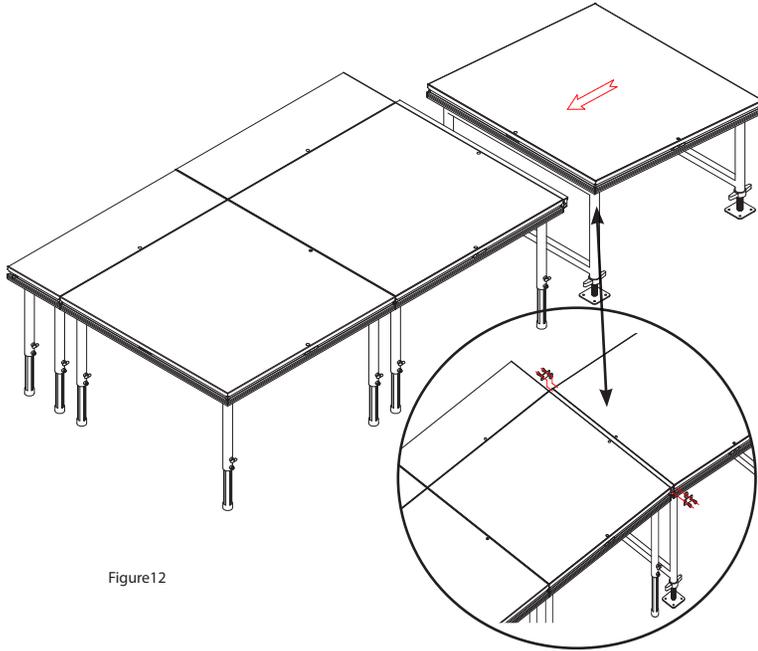


Figure12

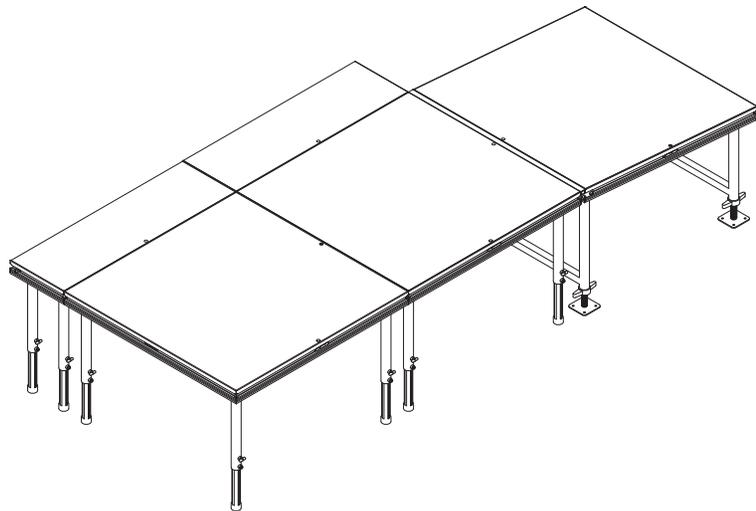

ASSEMBLY OF RAMP TO MIDDLE LANDING

First install stage connecting panel (RUCP or RUCPAL) to ramp middle landing platform using the hardware provided as shown in figure 5

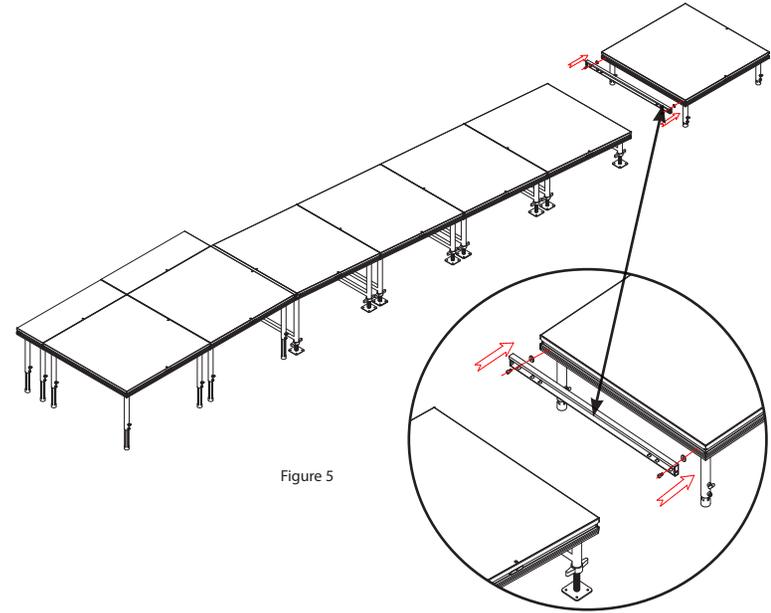


Figure 5

Next attach the platform with the installed stage connecting panel (RUCP or RUCPAL) to the ramp with provided hardware as shown in figure 6

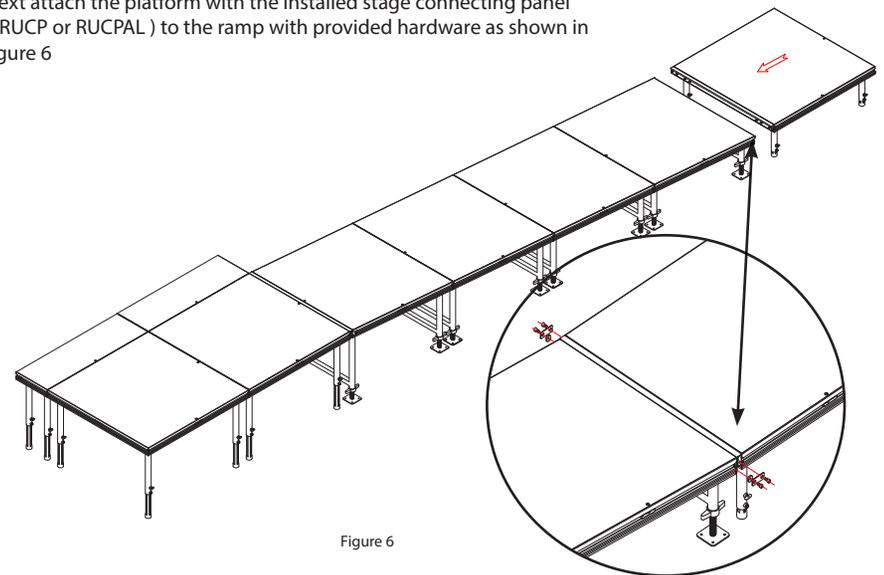


Figure 6

Create the middle landing as shown in figure 7 by adding multiple platforms and locking them together using the hex key.

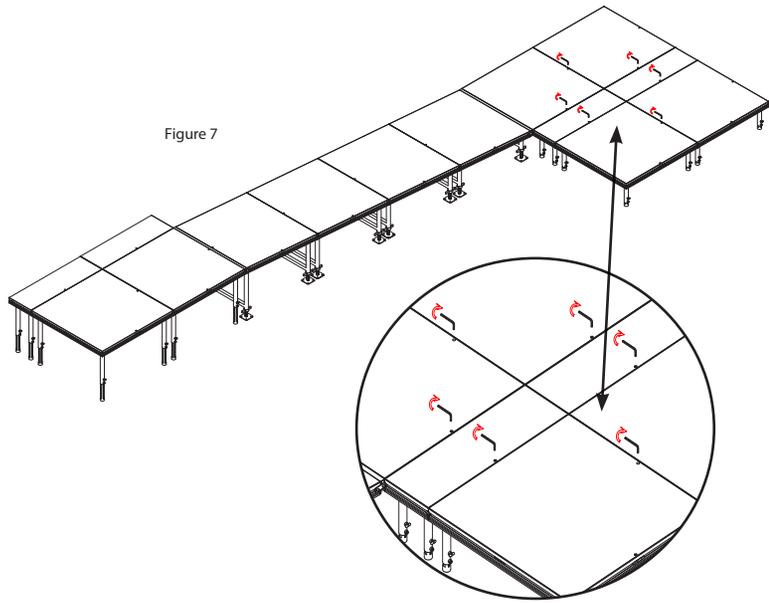


Figure 7

Next attach the platform with the installed stage connecting panel (RUCP or RUCPAL) to the ramp with provided hardware as shown in figure 9

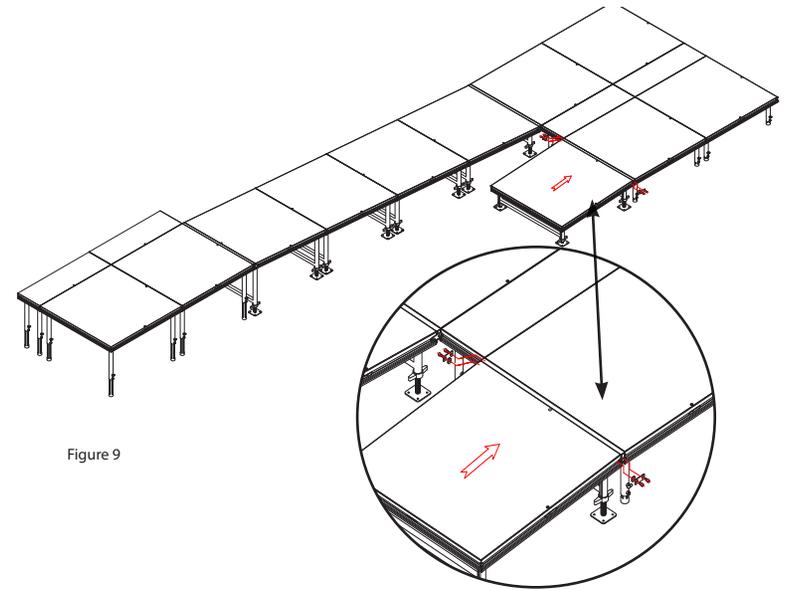


Figure 9

Install stage connecting panel (RUCP or RUCPAL) to ramp middle landing platform using the hardware provided as shown in figure 8


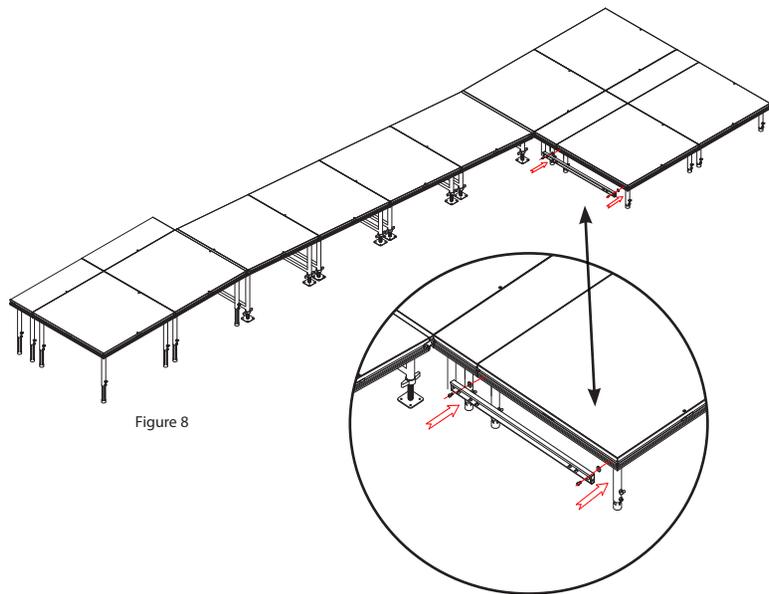


Figure 8

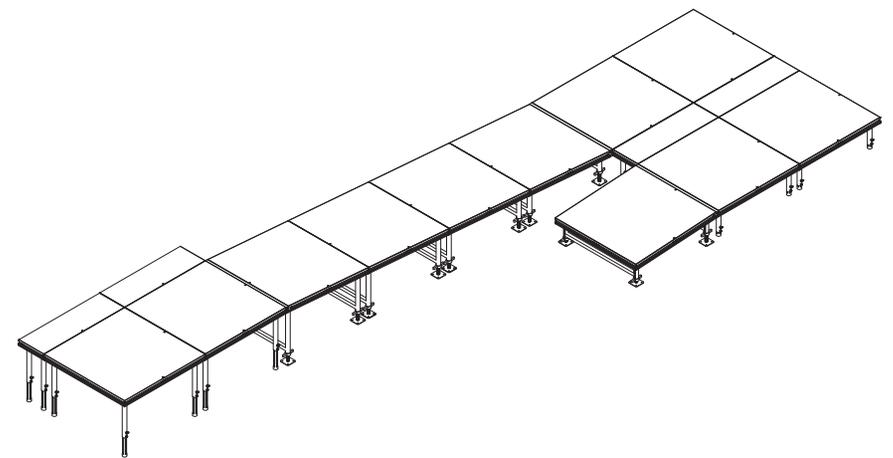

ASSEMBLY OF BOTTOM PLATE TO RAMP

Attach bottom plate to the ramp with provided hardware as shown in figure 13



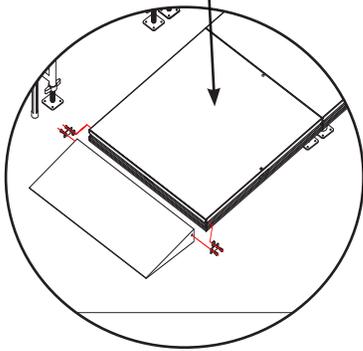


Figure 13

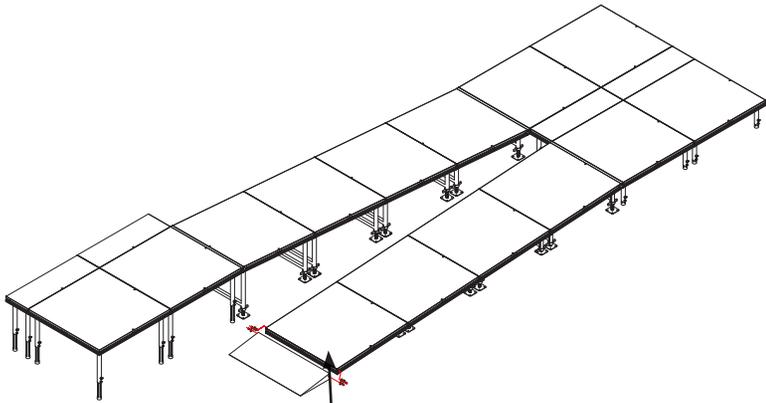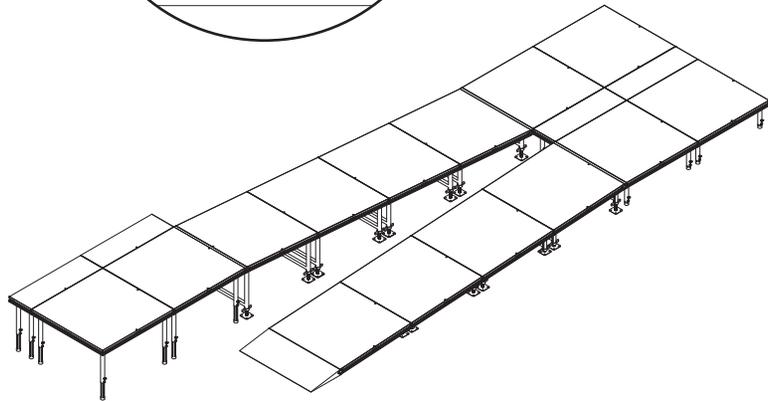

INSTALLATION OF RAMP TO INTELLISTAGE STAGE


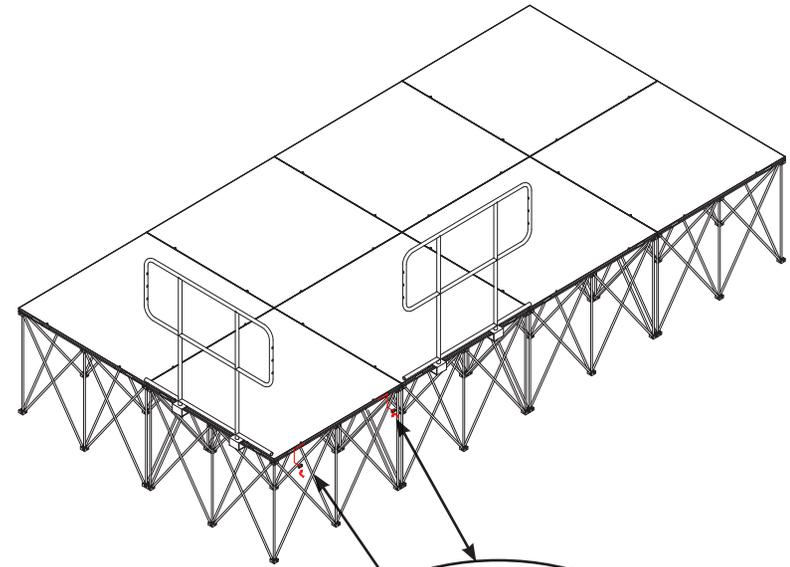


Figure 14

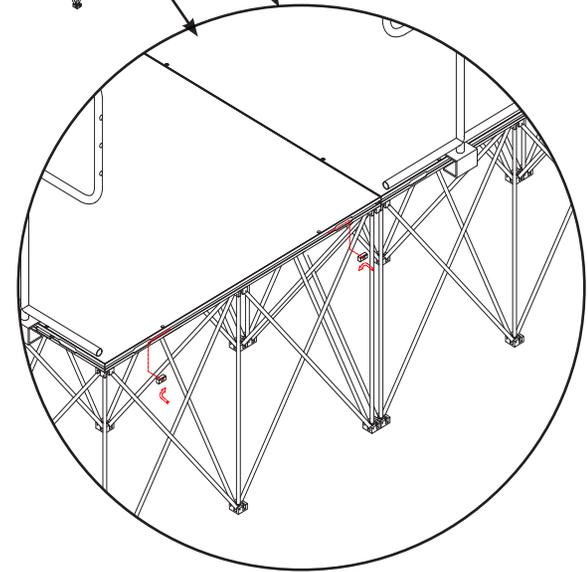

Slide assembly inserts into Intellistage platform as shown in figure 14



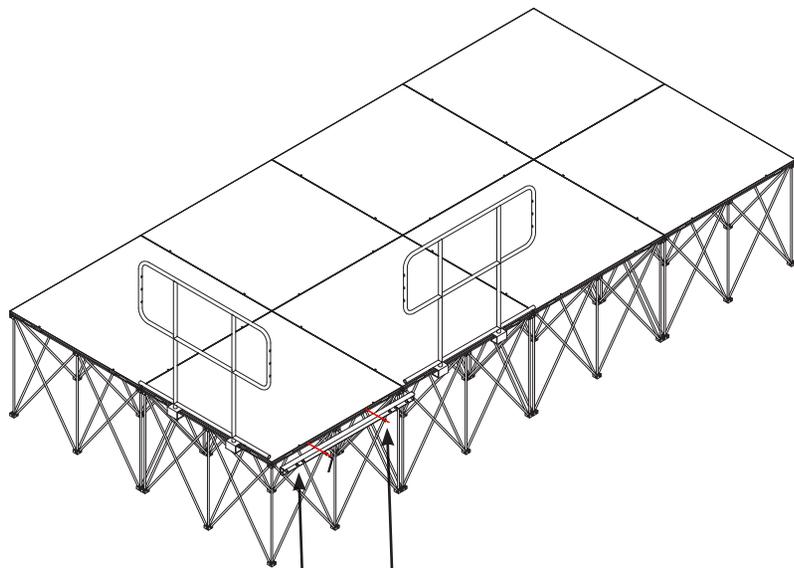


Figure 15

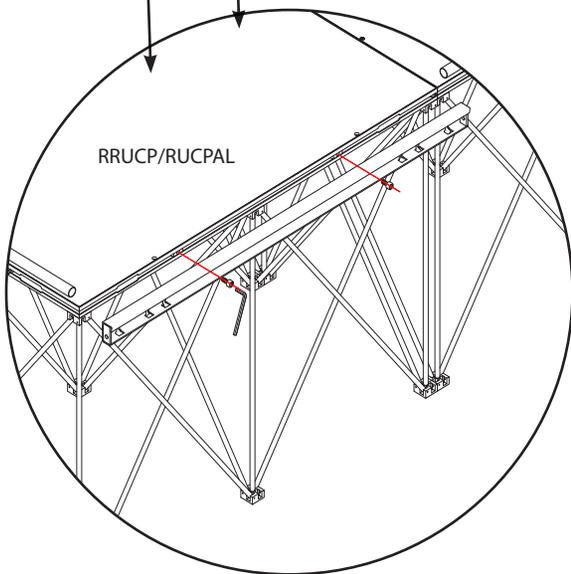

RRUCP/RUCPAL



Attach RRUCP/RRUCPAL connecting panel to stage platform with included hardware and hex key as shown in figure 15

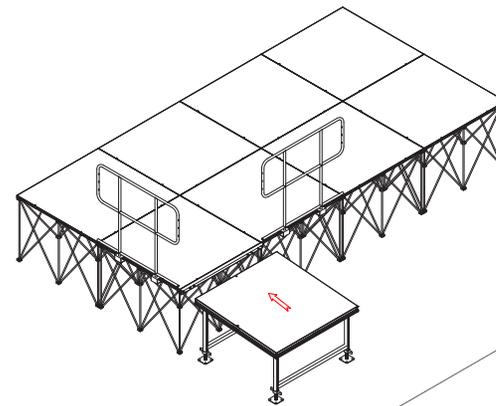


Place top ramp platform to next to installed stage connecting panel

Figure 16


Secure top ramp platform to stage as shown in figure 16

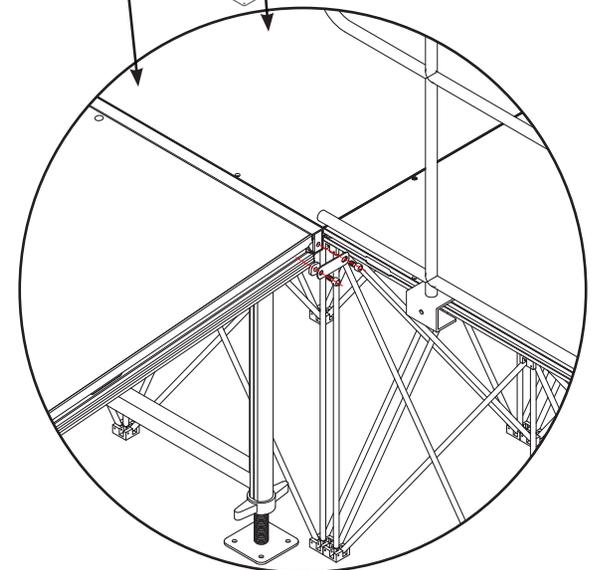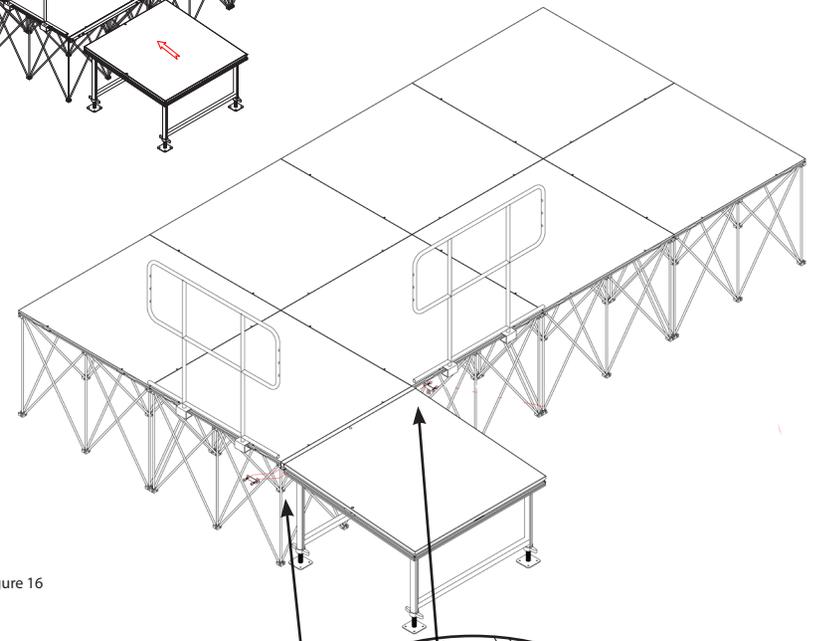

INSTALLATION OF RAMP TO TO QUICKLOCK STAGES

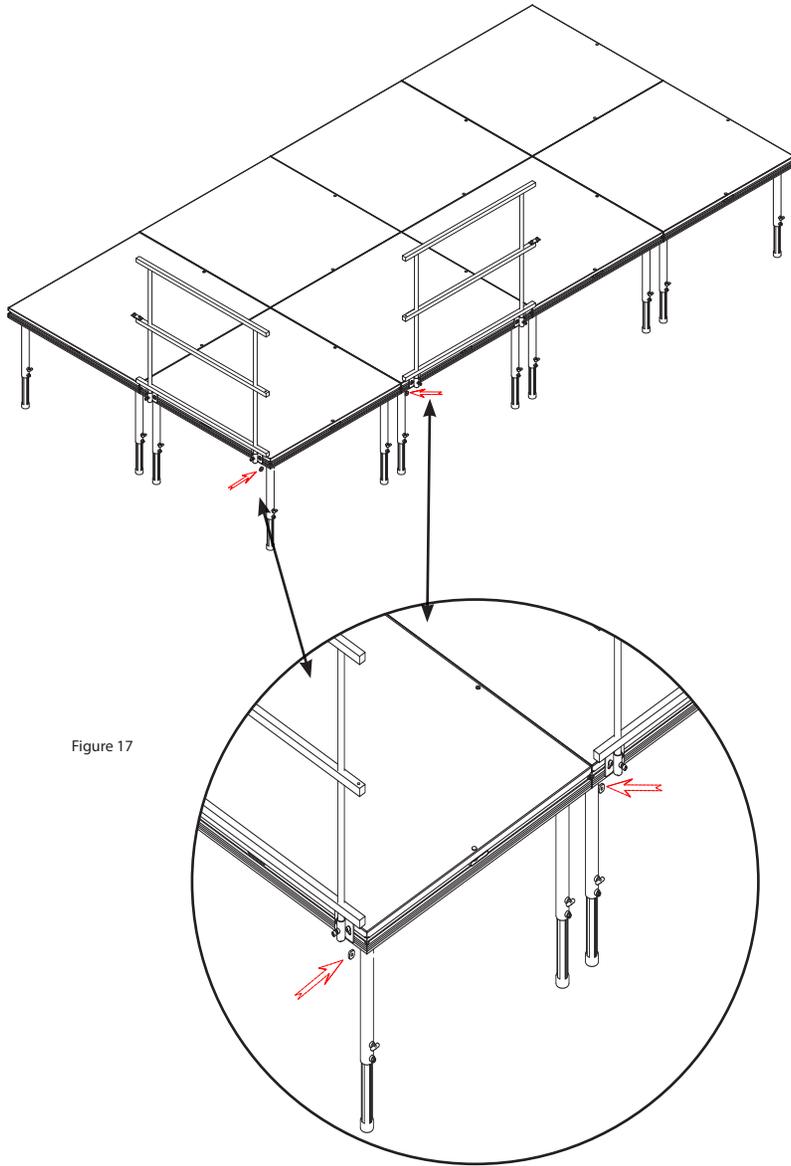

Slide assembly inserts into QuickLock platform as shown in figure 17

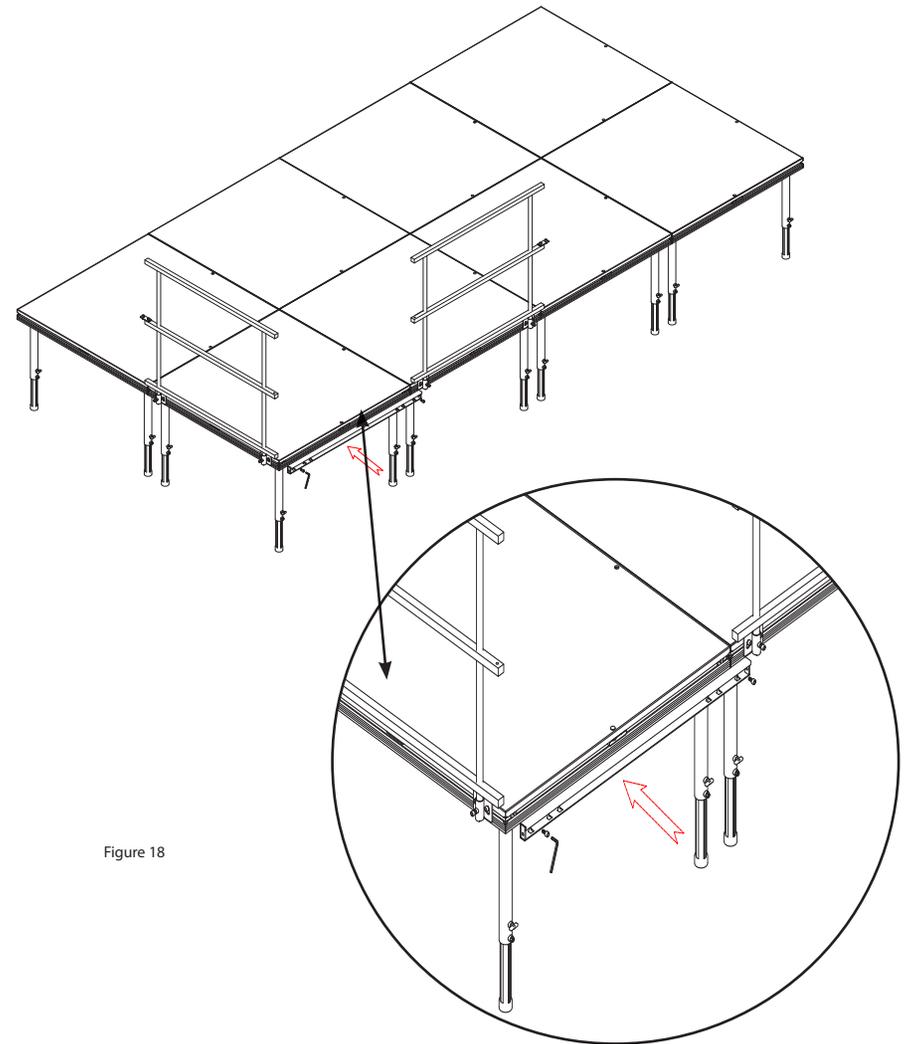

Attach RRUCP/RRUCPAL connecting panel to stage platform with included hardware and hex key as shown in figure 18

INSTALLATION OF RAMP TO PROFLEX STAGES

Place top ramp platform next to installed stage connecting panel

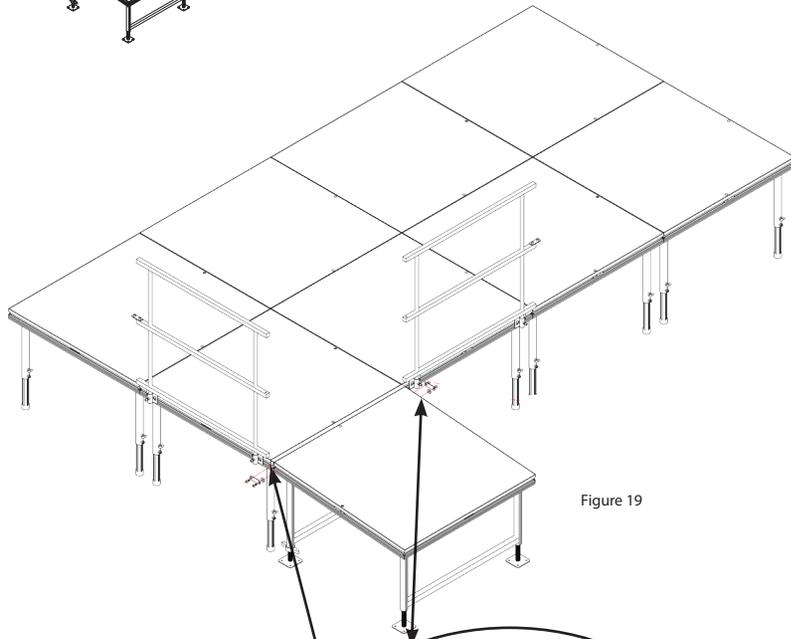
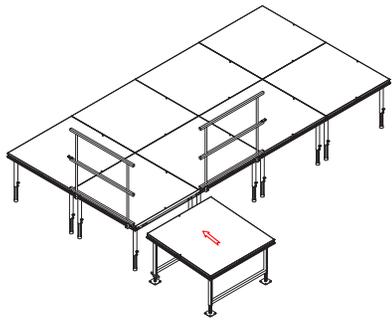


Figure 19

Secure top ramp platform to stage as shown in figure 19



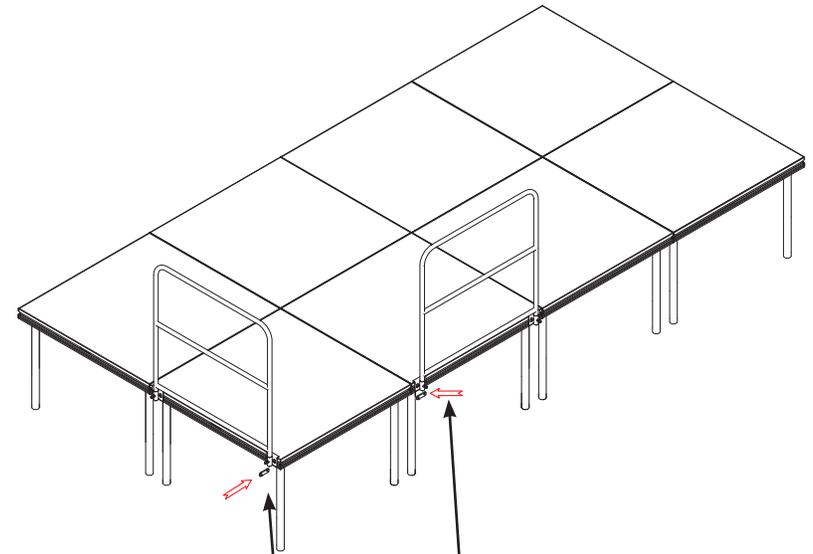


Figure 20

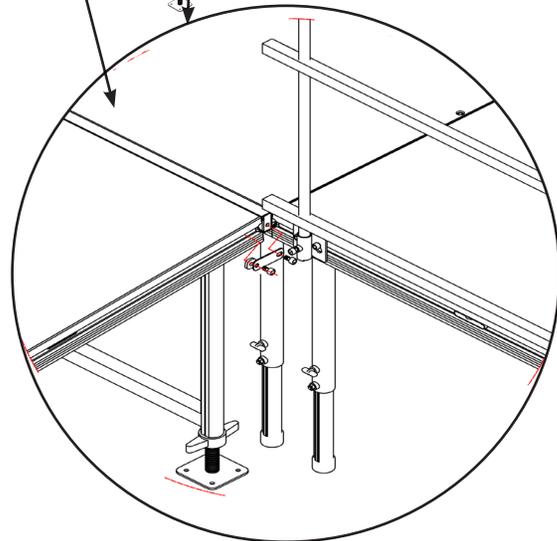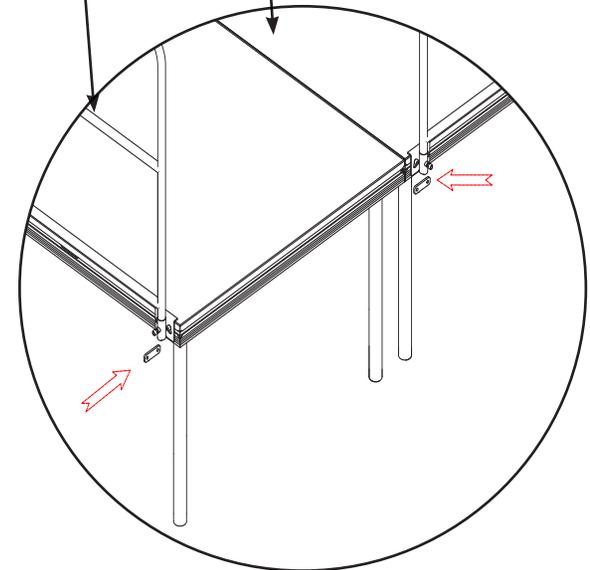

Slide assembly inserts into ProFlex platform as shown in figure 20


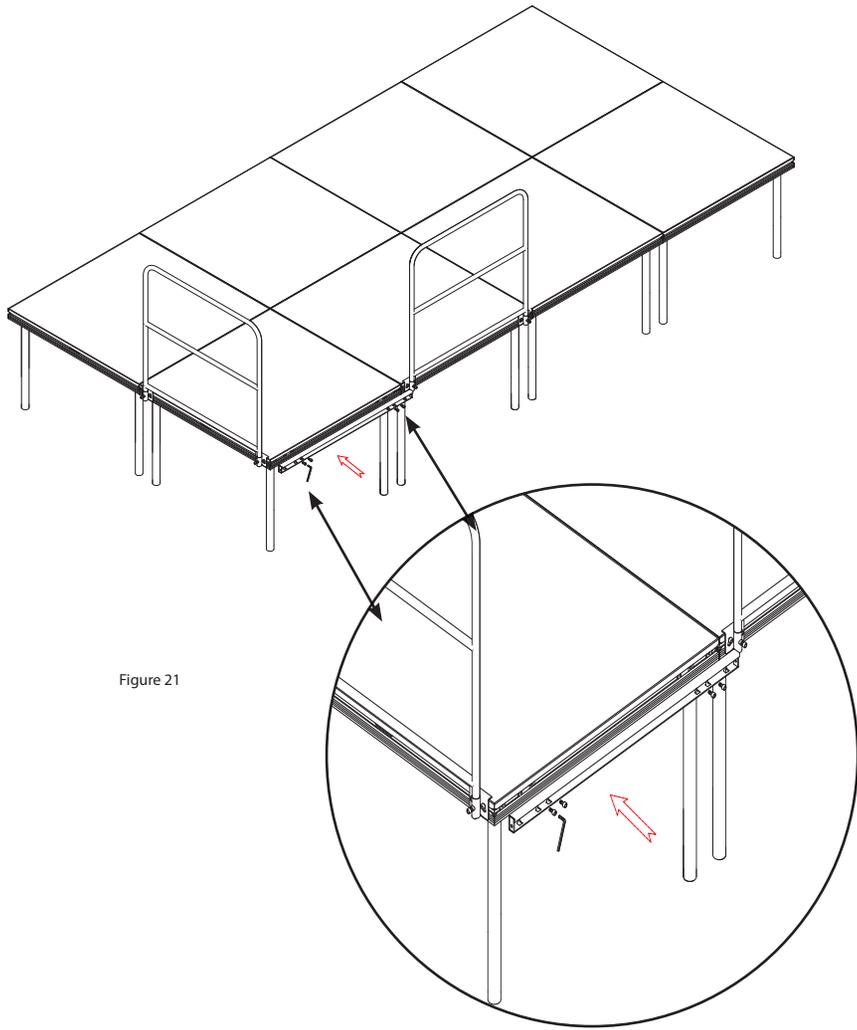


Figure 21

Attach RRUCP/RRUCPAL connecting panel to stage platform with included hardware and hex key as shown in figure 21

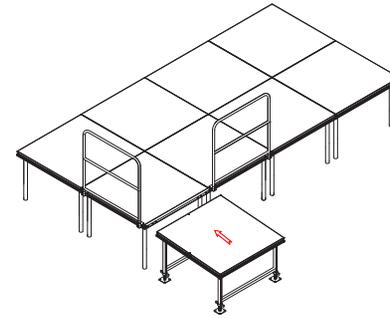

Place top ramp platform next to installed stage connecting panel


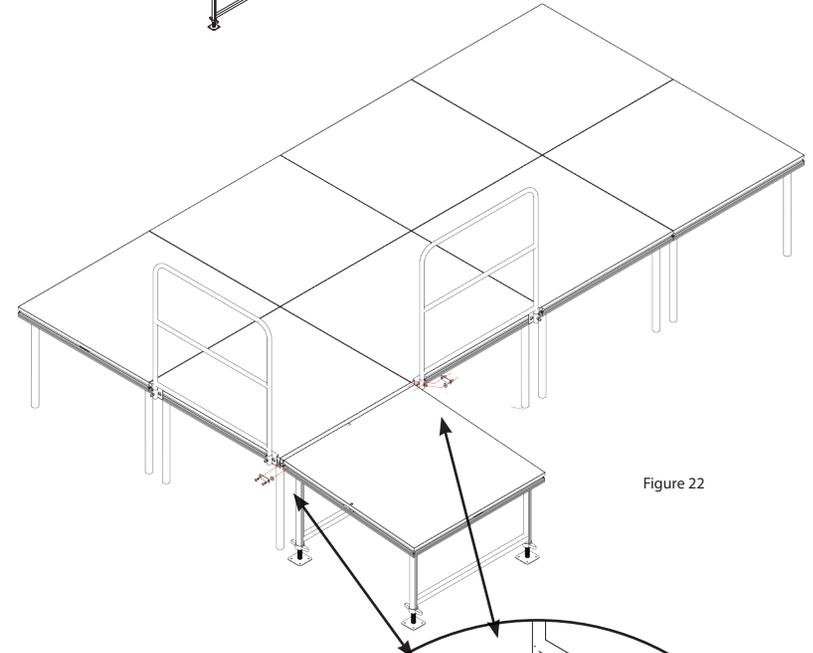



Figure 22

Secure top ramp platform to stage as shown in figure 22

INSTALLATION OF RAMP TO ALL TERRAIN STAGES

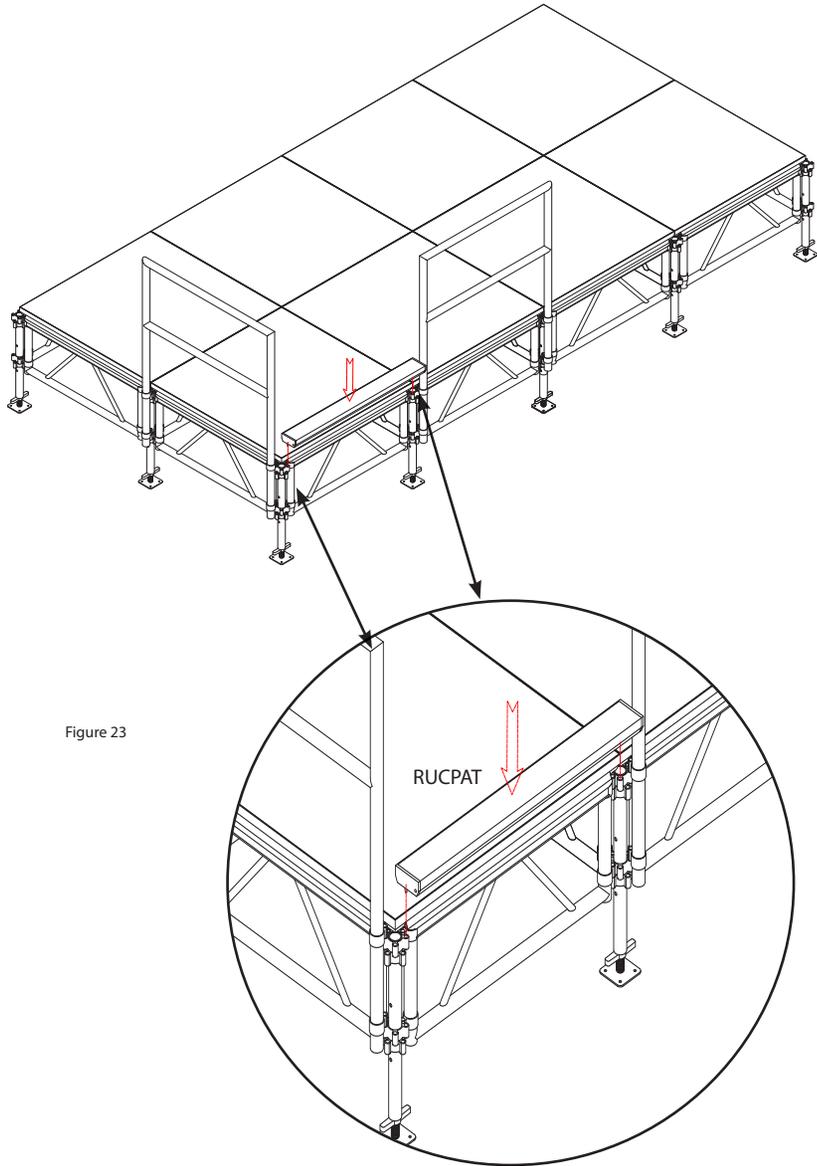

Attach RUCPAT connecting panel to stage platform as shown in figure 23

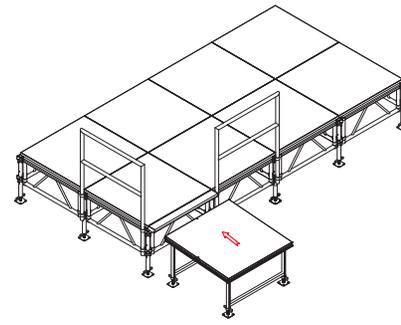

Place top ramp platform to next to installed stage connecting panel

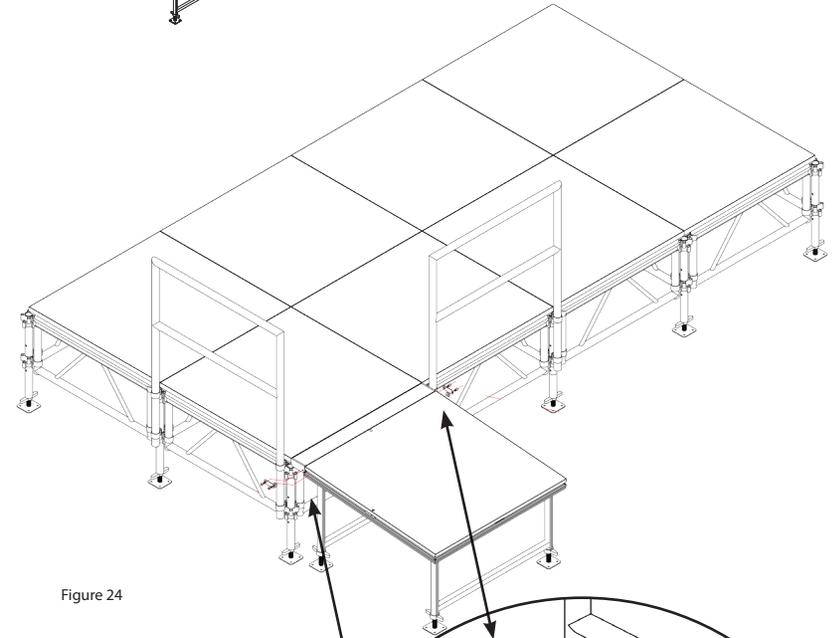


Figure 24

Secure top ramp platform to stage as shown in figure 24

INSTALLATION OF RAMP TO STAGING 101 STAGES


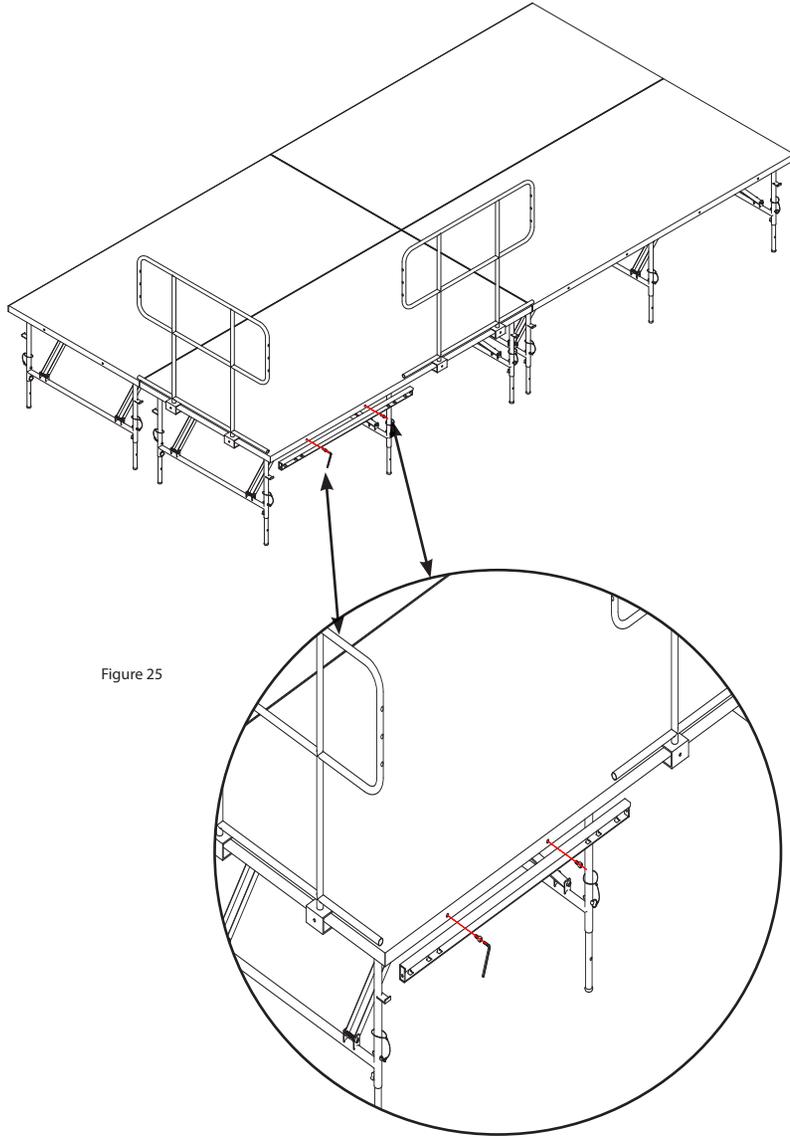


Figure 25

Attach RRUCP/RRUCPAL connecting panel to stage platform with included hardware and hex key as shown in figure 25

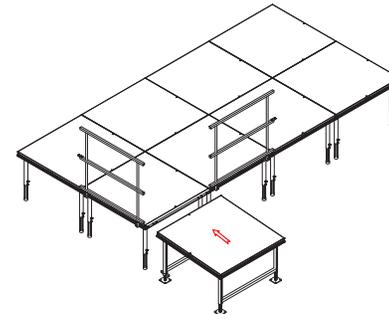

Place top ramp platform next to installed stage connecting panel

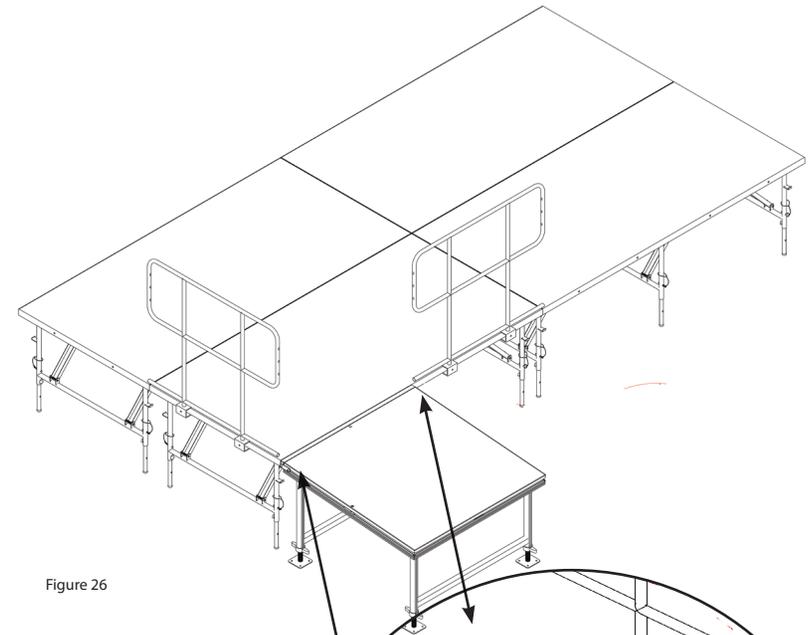


Figure 26

Secure top ramp platform to stage as shown in figure 26

INSTALLATION OF RAMP FOR OTHER INSTALLATIONS


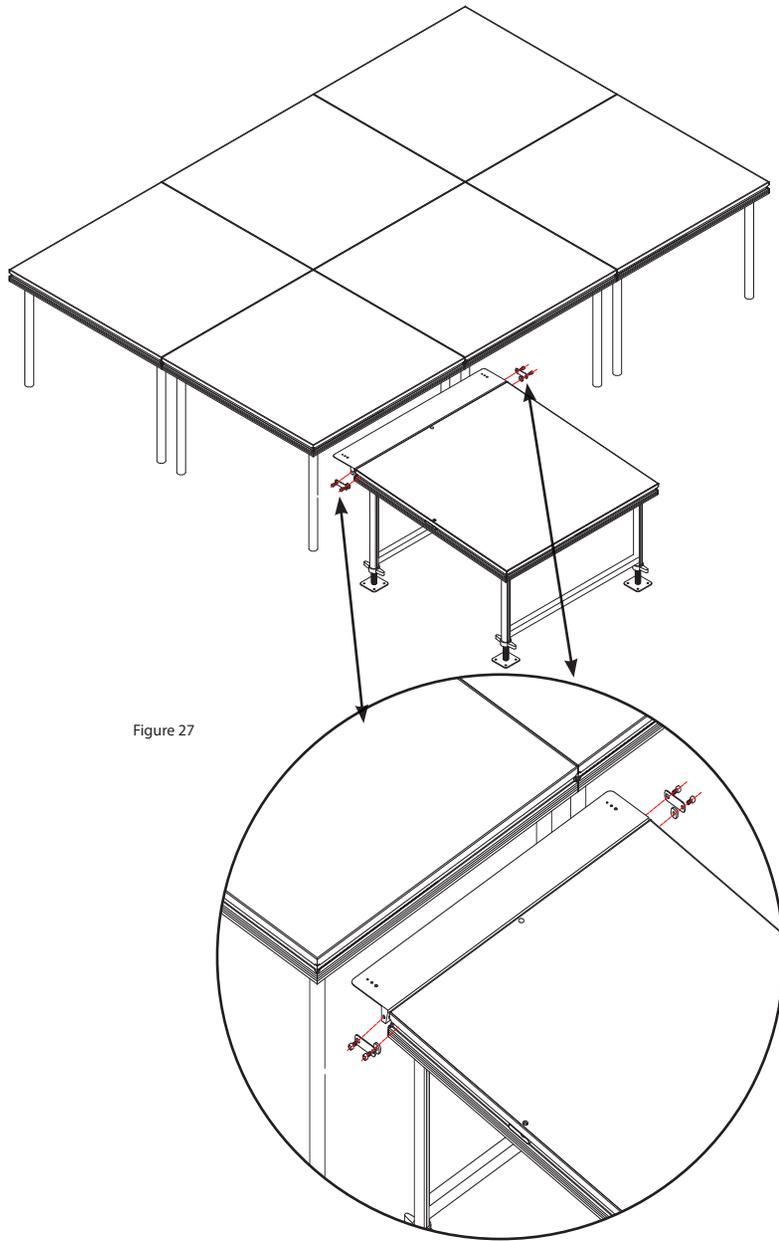


Figure 27

Attach universal adapter connecting panel to top ramp platform as shown in figure 27

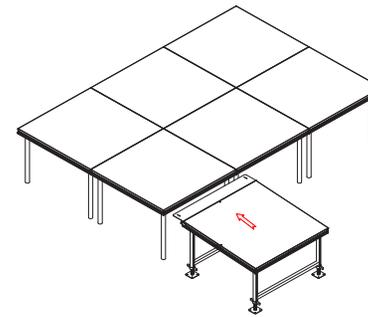

Place top ramp platform with installed stage connecting panel next to surface you would like to attach the ramp too


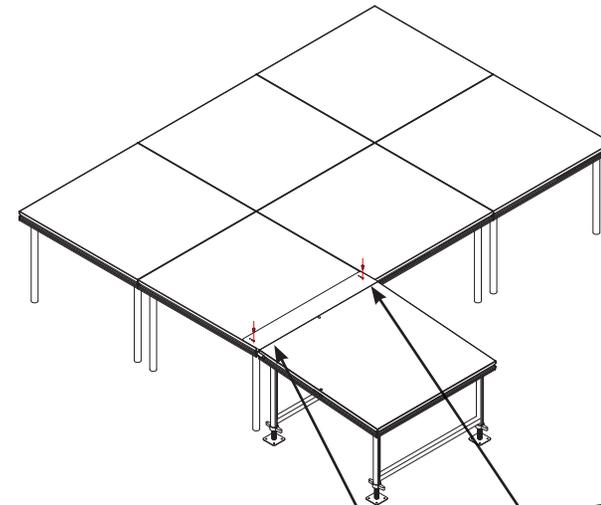


Figure 28


Secure top ramp platform to surface as shown in figure 28

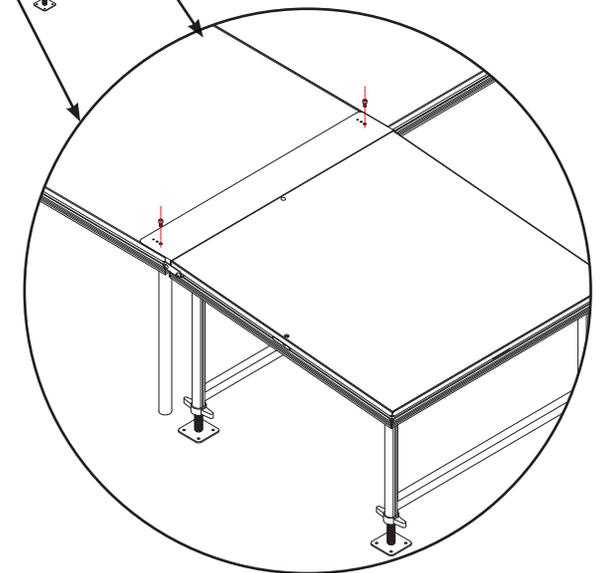

GENERAL GUARDRAIL ASSEMBLY


Slide double assembly insert QLDAI into stage platform and attach guard rail mounting hardware QLGRCLAMP to stage platforms as shown below in figures 29 and 30. At this stage do not tighten hardware brackets to the platform. Wait until the guardrails are installed onto brackets before tightening guardrail brackets to the platform.

Figure 29

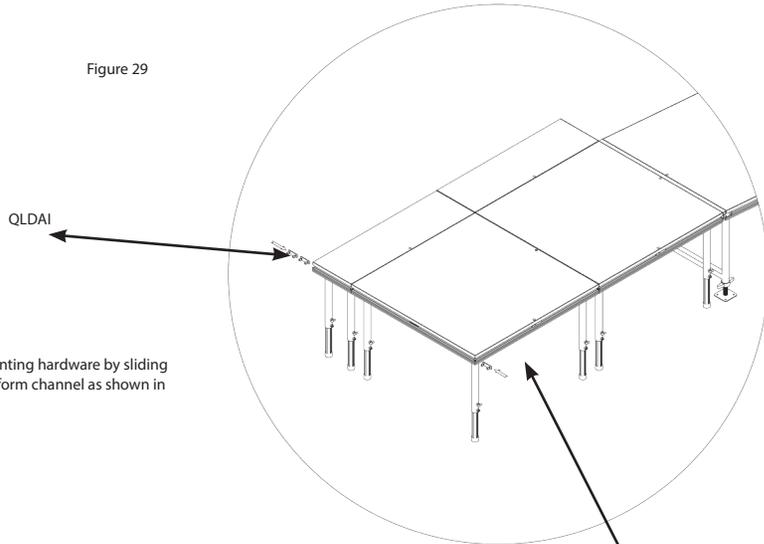


Insert guardrail mounting hardware by sliding it into the stage platform channel as shown in figure 29

Figure 30

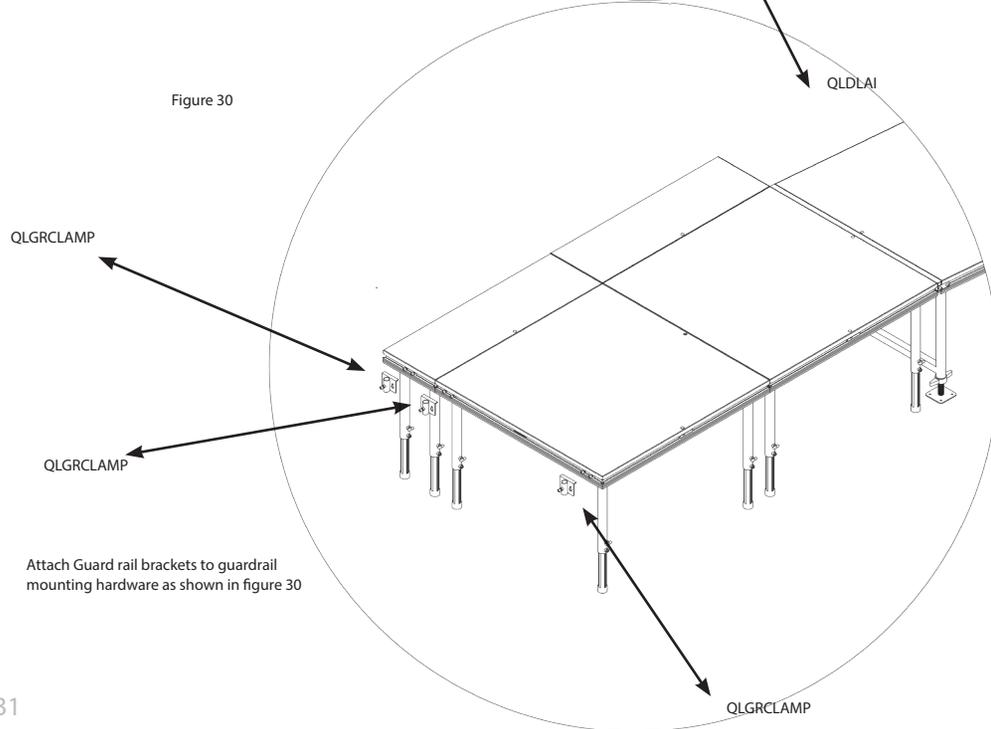

Attach Guard rail brackets to guardrail mounting hardware as shown in figure 30


Figure 31

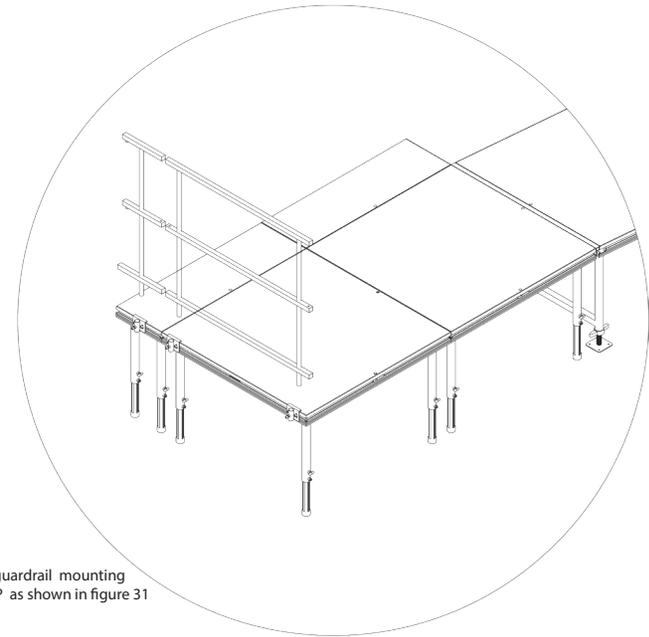

Insert guardrails into guardrail mounting hardware OLGRCCLAMP as shown in figure 31


Figure 32

Lock guardrails into place using hex key as show in figure 32. At this stage you can now tighten guardrail mounting hardware OLGRCCLAMP to the platform.

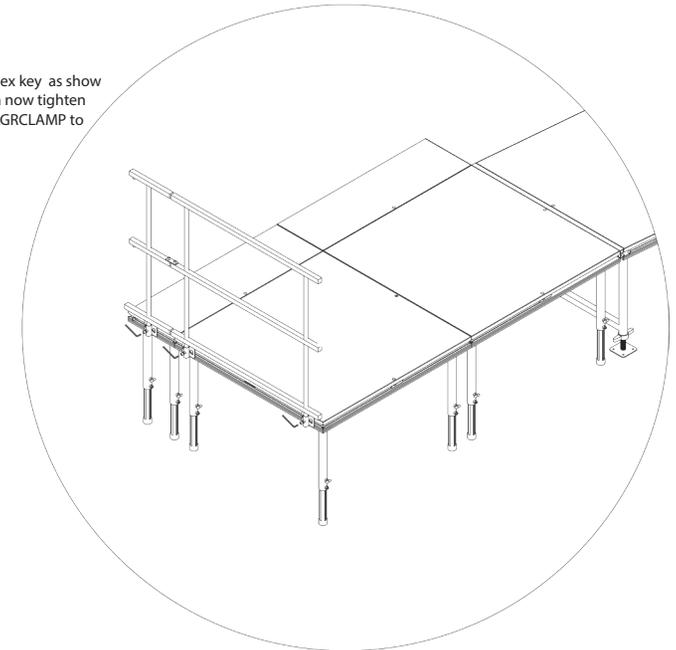


GUARDRAIL ASSEMBLY OF RAGRD4, RASGRD AND QLGRS4

Mount guardrail mounting hardware to platform as shown in general guardrail assembly in the previous section of this manual. Then insert RASGRD as shown below in figure 33 and lock into place using hex key

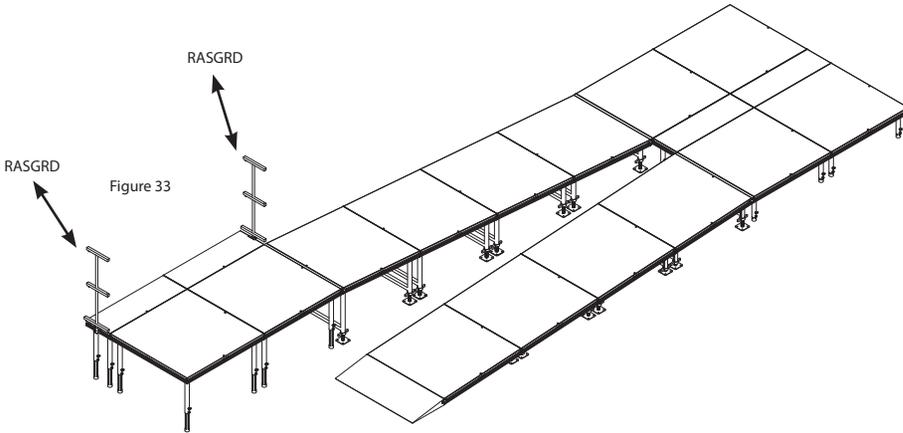

Continue attaching guardrails (QLGRS4) to the platforms as shown in figure 34 with hardware provided following the steps shown in general guardrail assembly in the previous section of this manual.

Figure 34

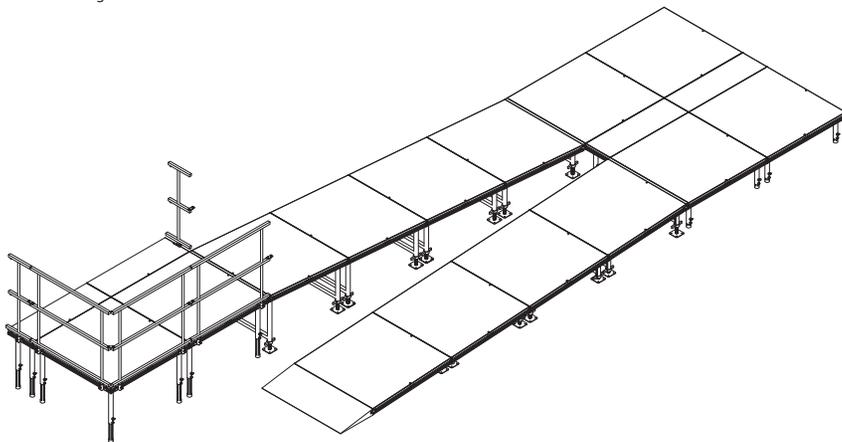

Attach RAGRD4, QLGRS4 and RASGRD guardrails together by sliding extension tubes into the openings on both guardrails as shown in the drawing and securing them with hardware as shown in figures 35 thru figure 38

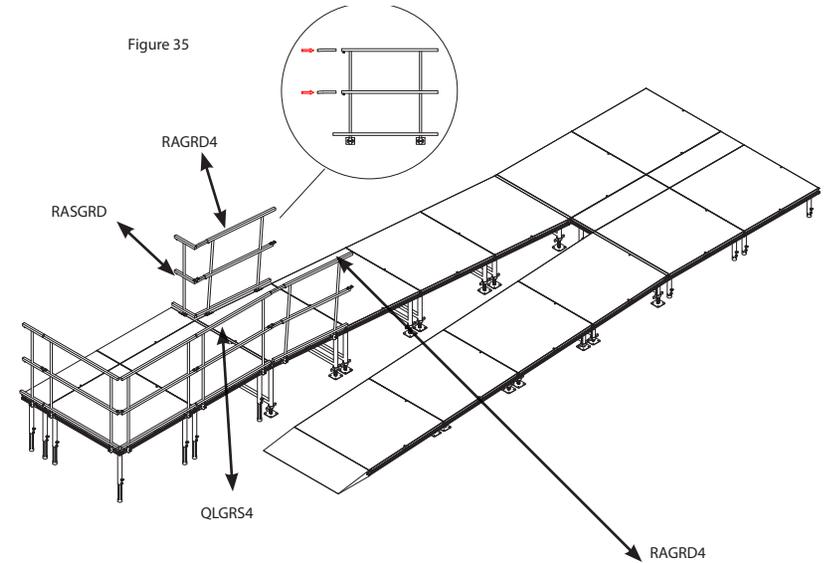


Figure 36


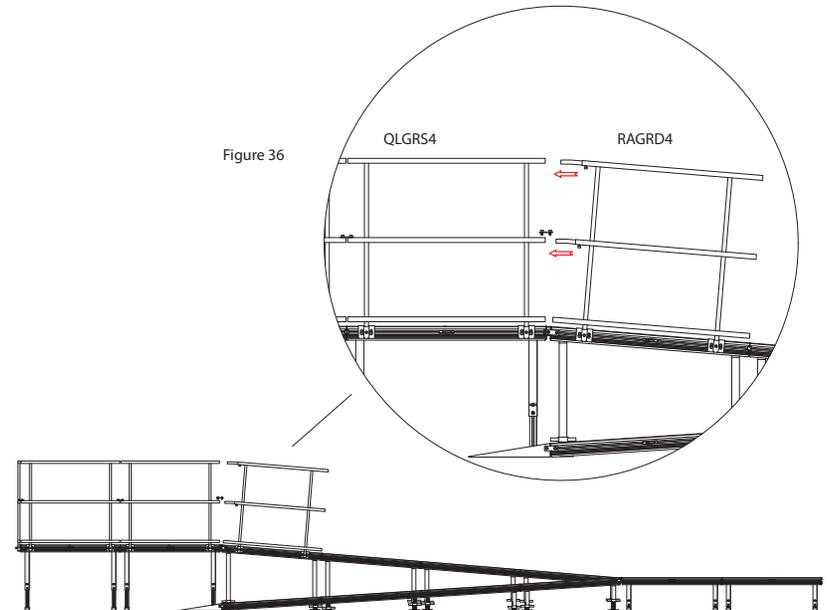


Figure 37

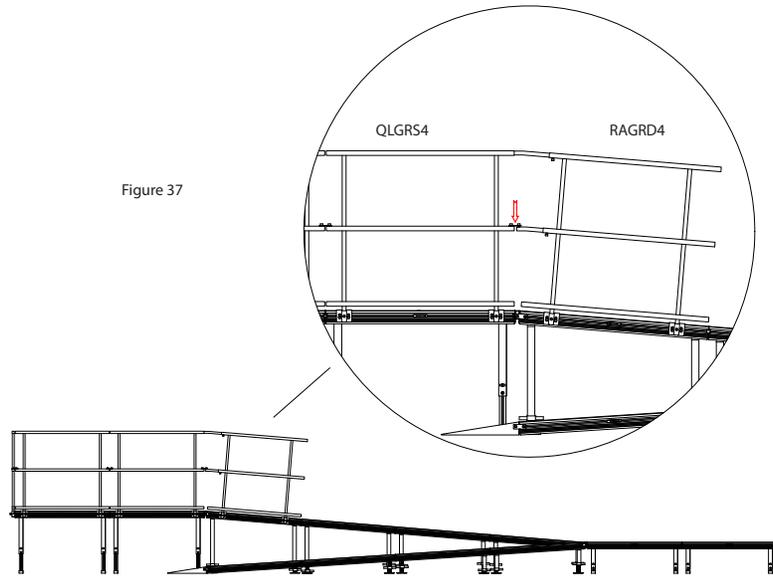

Continue the same procedure where needed (depending on your ramp configuratoin) as shown in figures 39 to 42

Figure 39

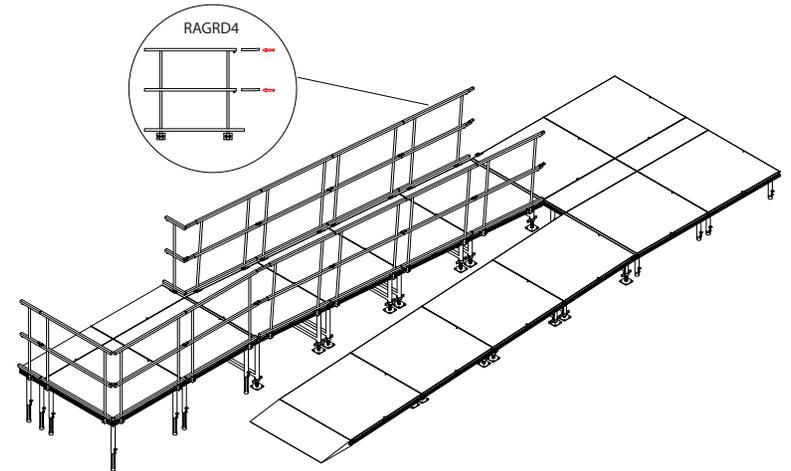


Figure 38

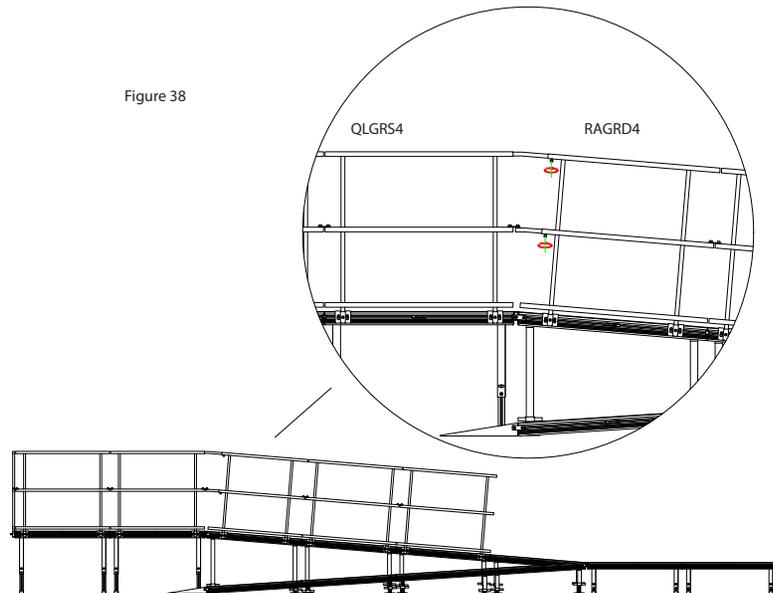


Figure 40

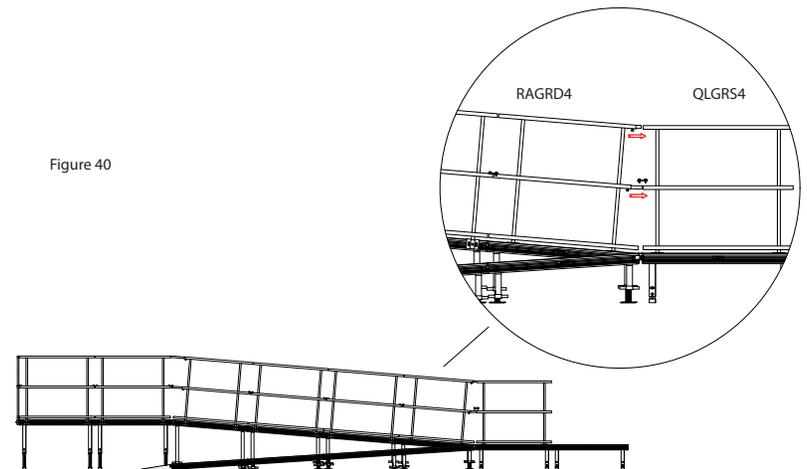


Figure 41


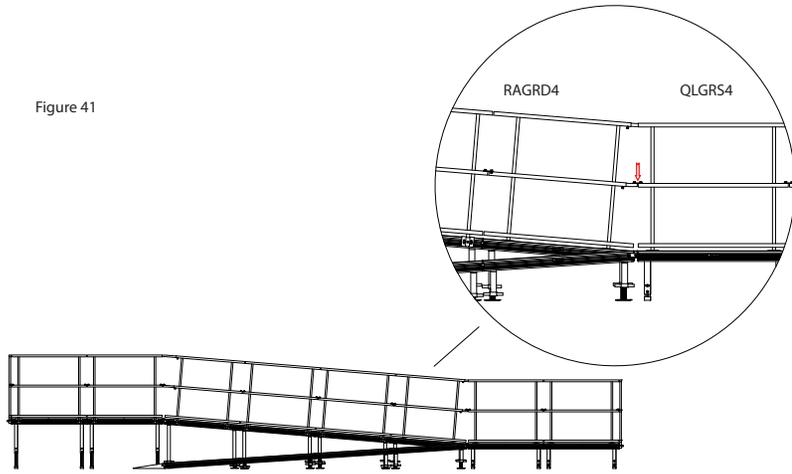


Figure 42

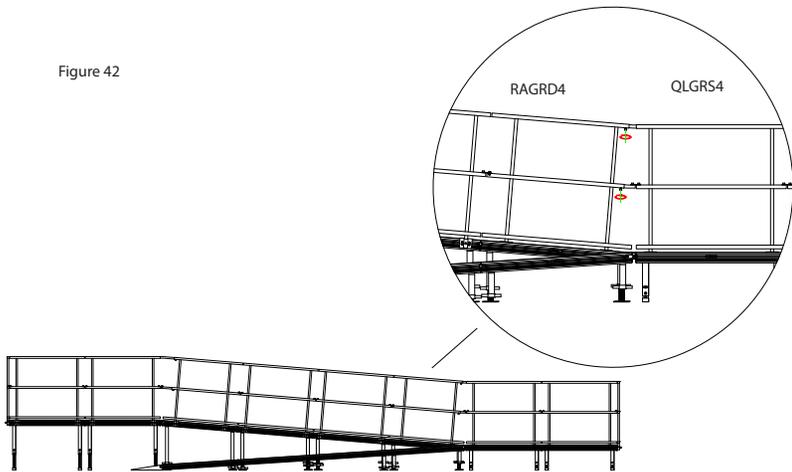

Continue the same procedure where needed as shown in figures 43 to 45

Figure 43

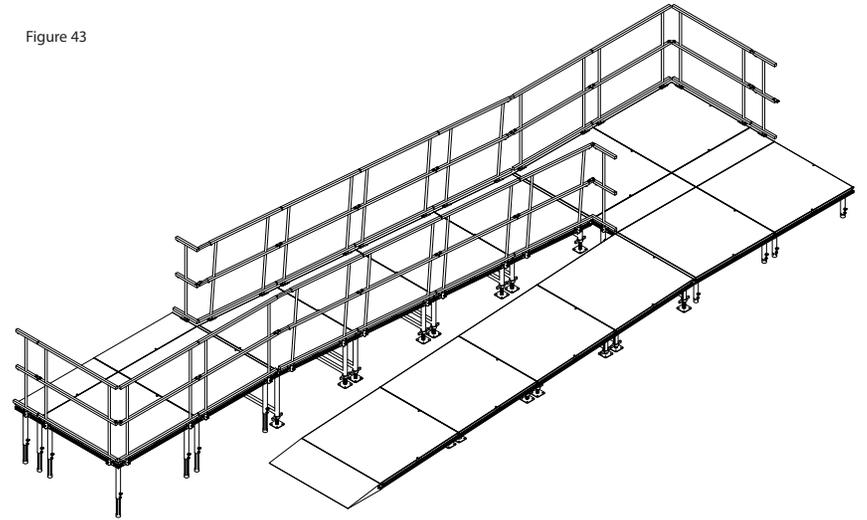


Figure 44



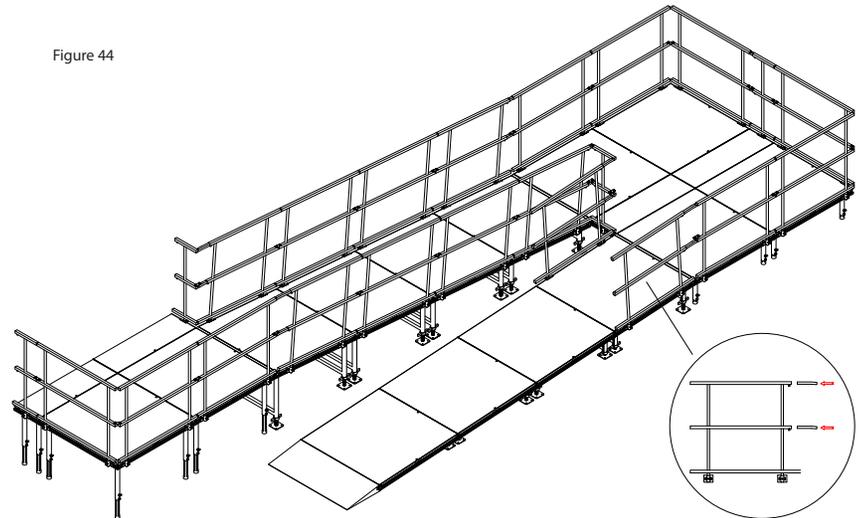


Figure 45

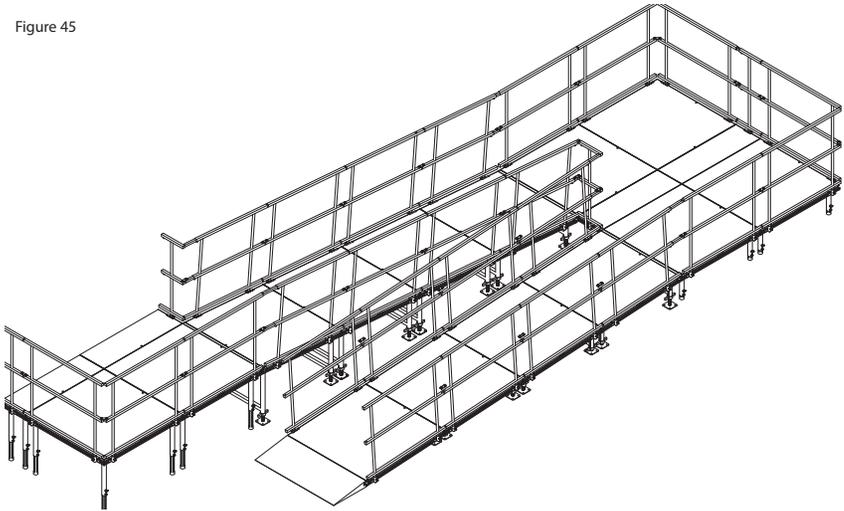


Examples of different ramp configurations shown

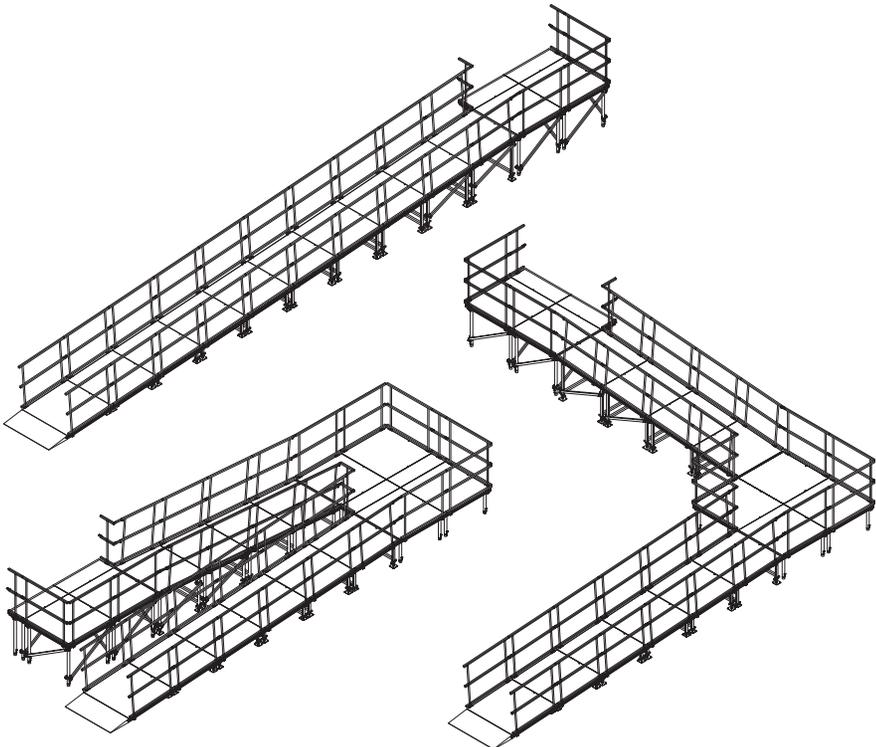

GUARDRAIL ASSEMBLY FOR INTELLISTAGE


Attach IS4X4GRPD to stage platform as shown in figure 46 following directions from the Intellistage stage manual

Figure 46

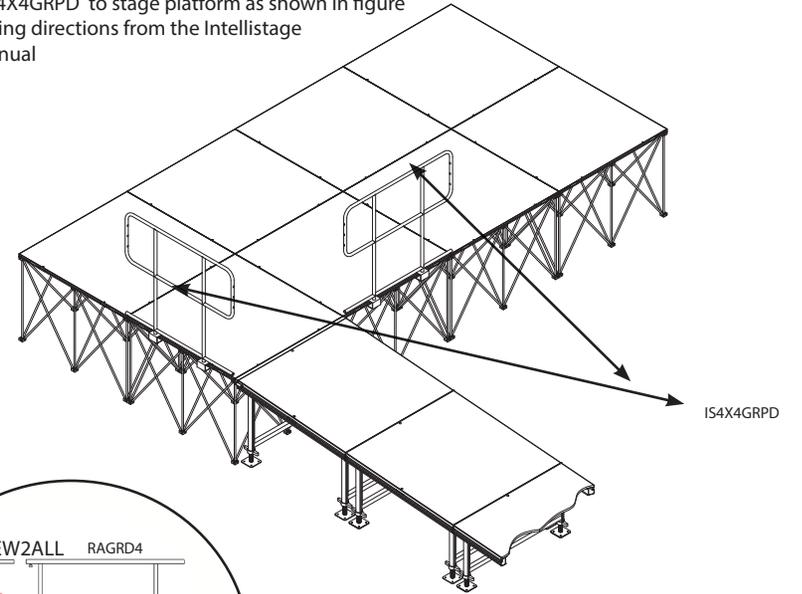

IS4X4GRPD


Figure 47

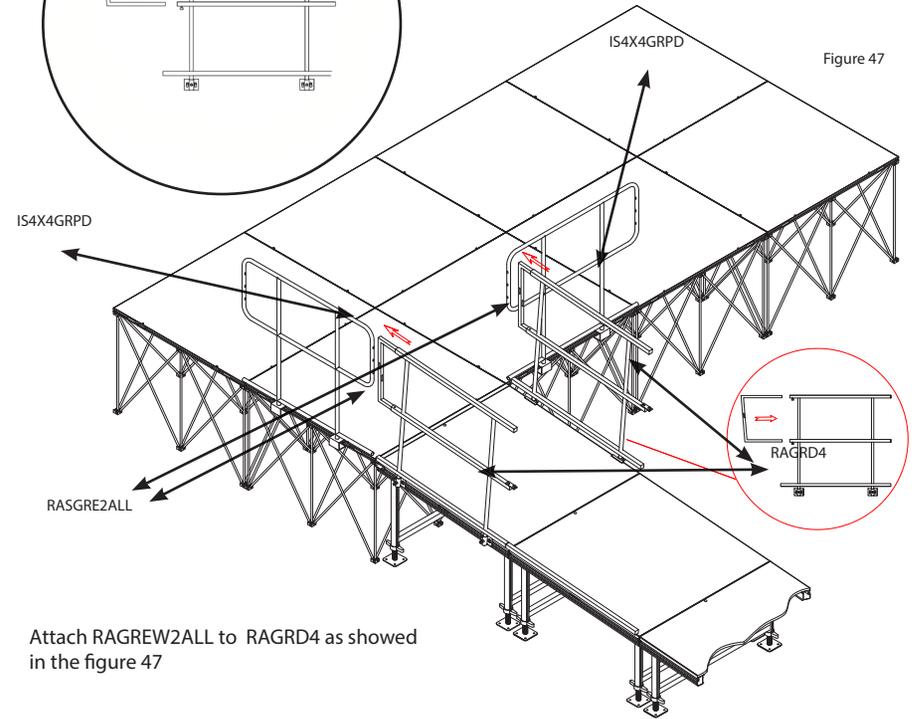

Attach RAGREW2ALL to RAGRD4 as showed in the figure 47

GUARDRAIL ASSEMBLY FOR QUICKLOCK STAGES

Figure 48

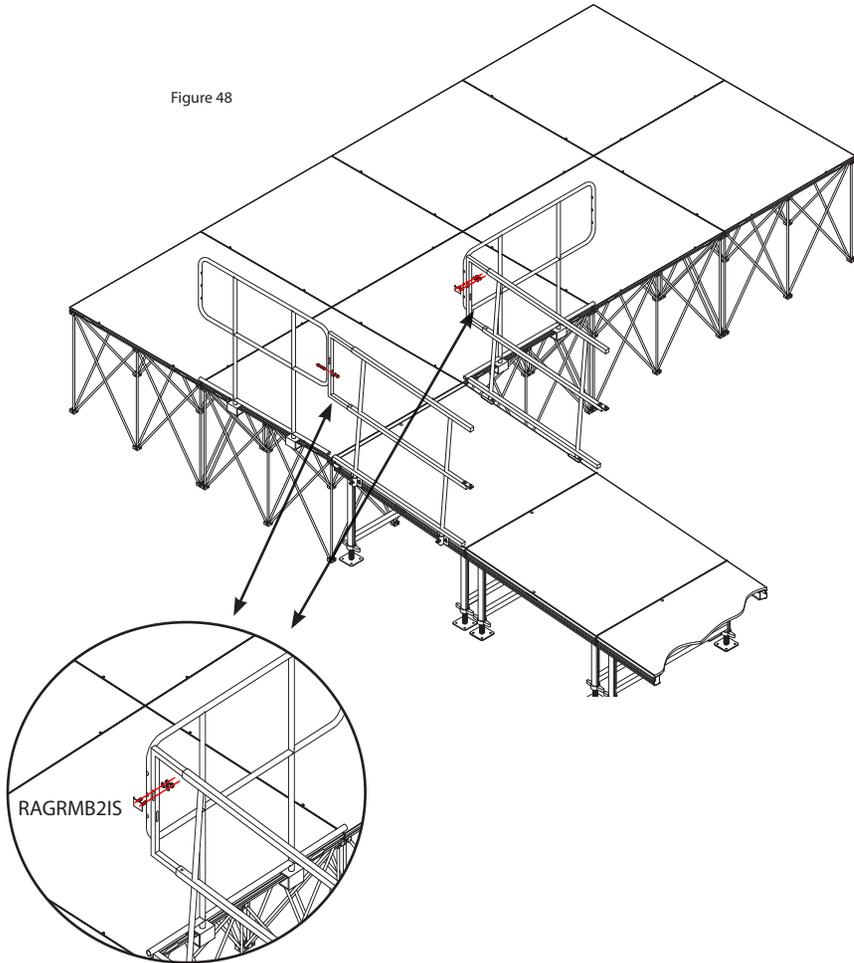

Secure RAGREW2ALL RAGRD4 and IS4X4GRPD with RAGRMB2IS hardware as shown in figure 48

Attach QLGRD4 to stage platform as shown in figure 49 following directions from the QuickLock stage manual

Figure 49



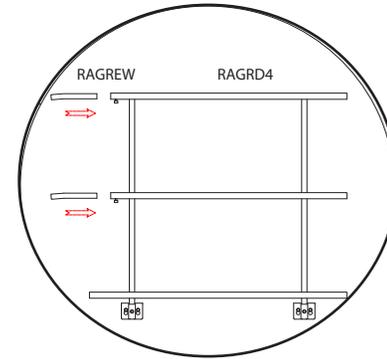



Figure 50

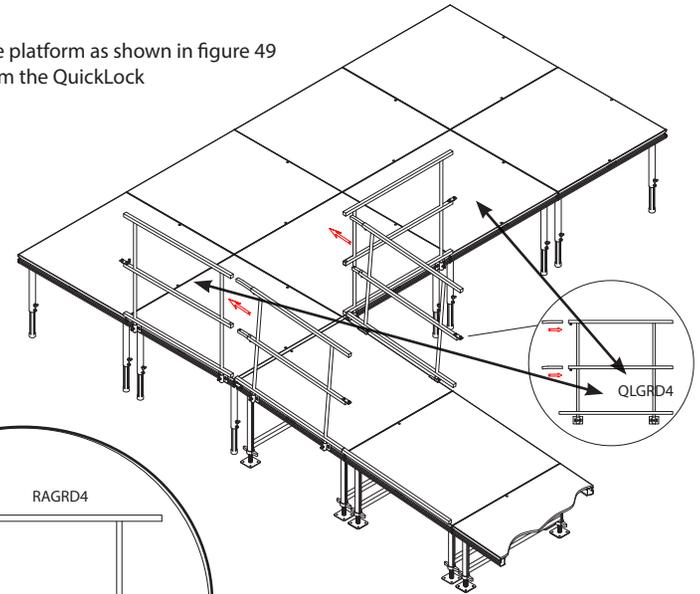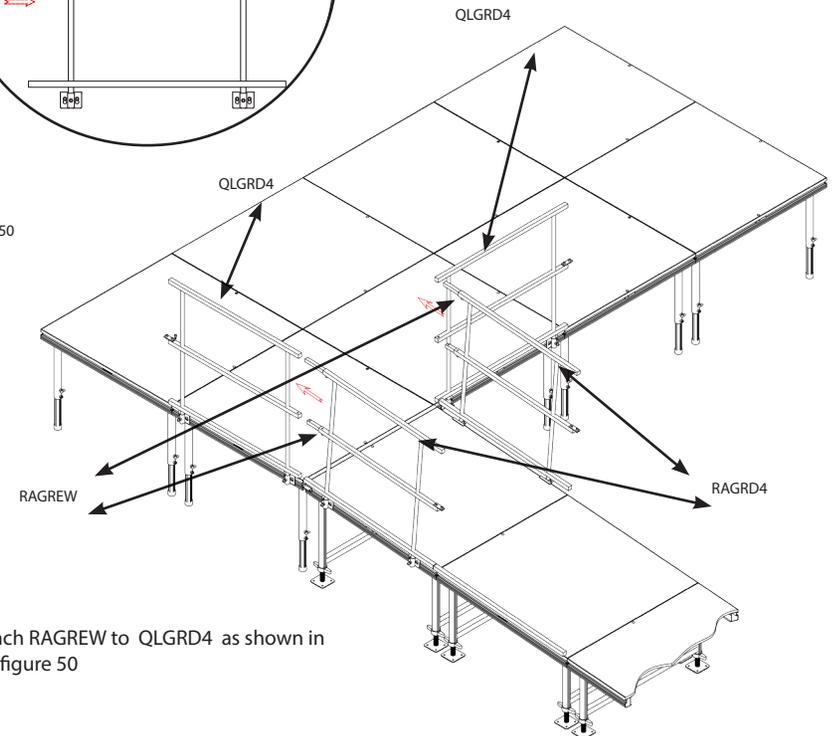

Attach RAGREW to QLGRD4 as shown in the figure 50

GUARDRAIL ASSEMBLY FOR PROFLEX STAGES

Figure 51

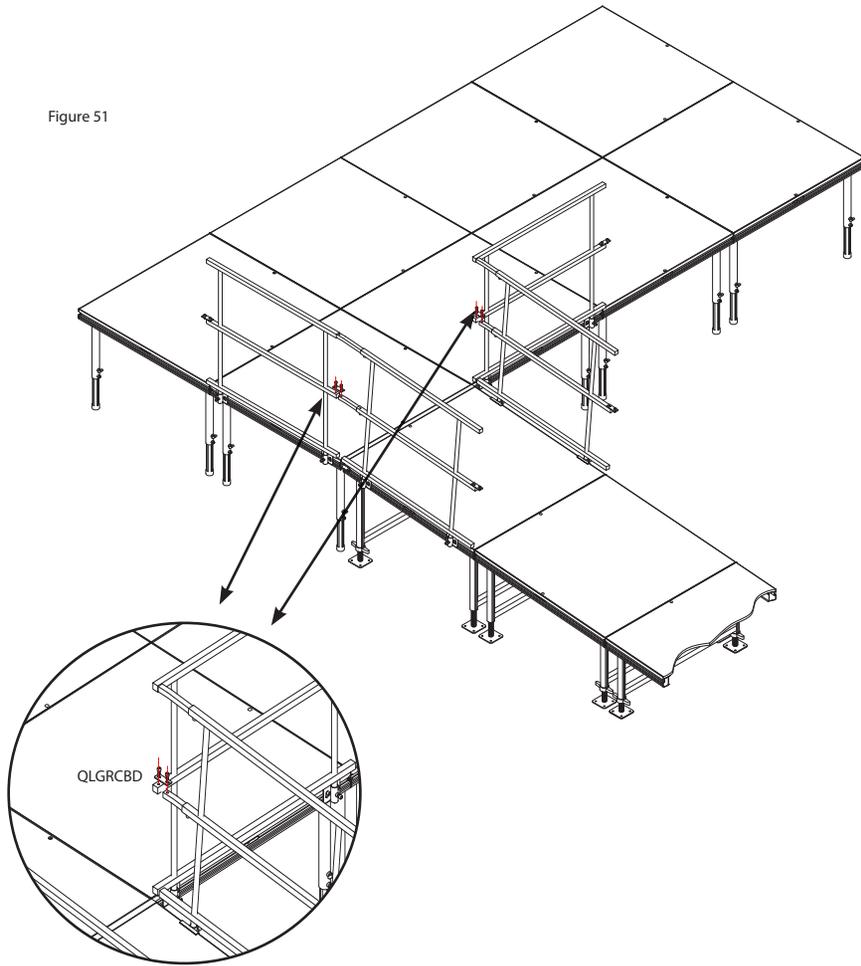

Secure RAGREW, RAGRD4 and QLGRD4 with QLGRCBD hardware as shown in figure 51

Attach PFGR4 to stage platform as shown in figure 52 following directions from the Proflex stage manual

Figure 52



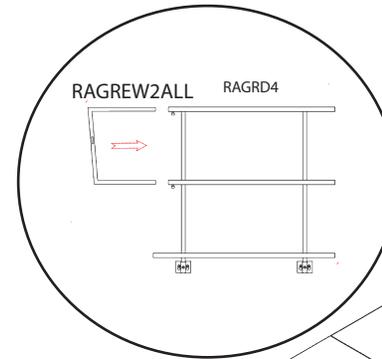



Figure 53

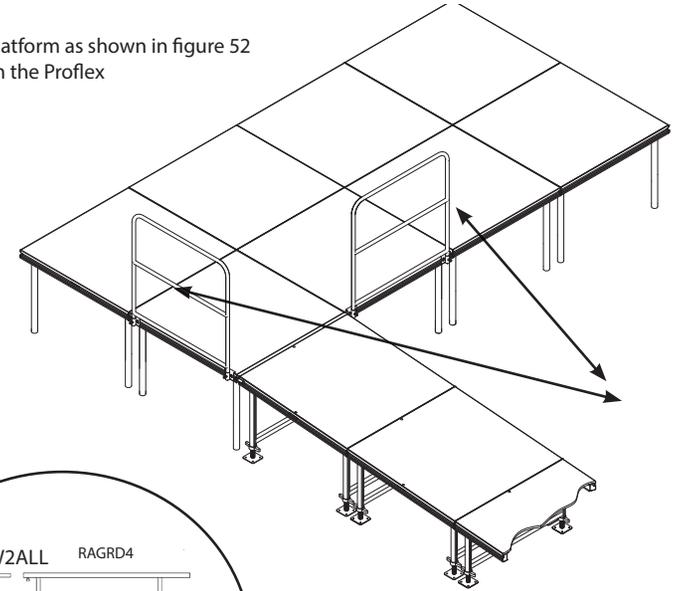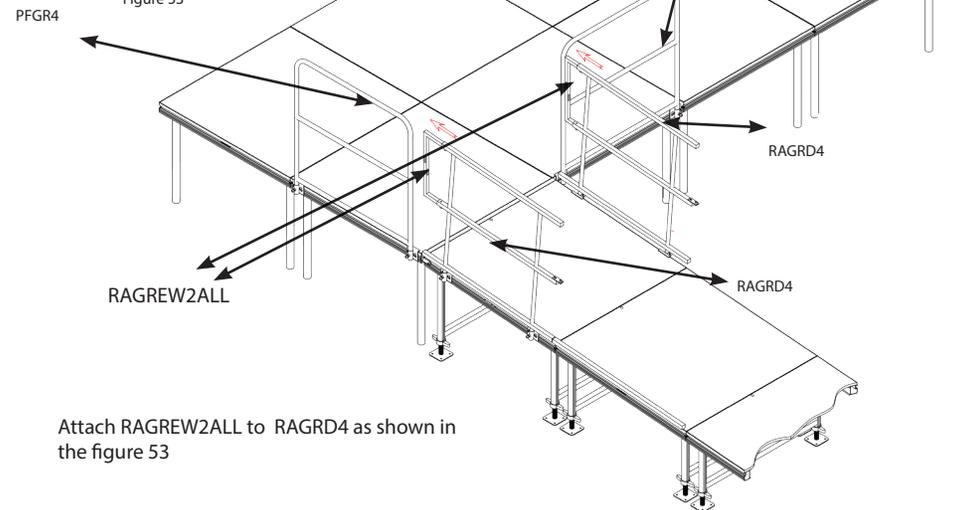

Attach RAGREW2ALL to RAGRD4 as shown in the figure 53

GUARDRAIL ASSEMBLY FOR ALL TERRAIN STAGES

Figure 54

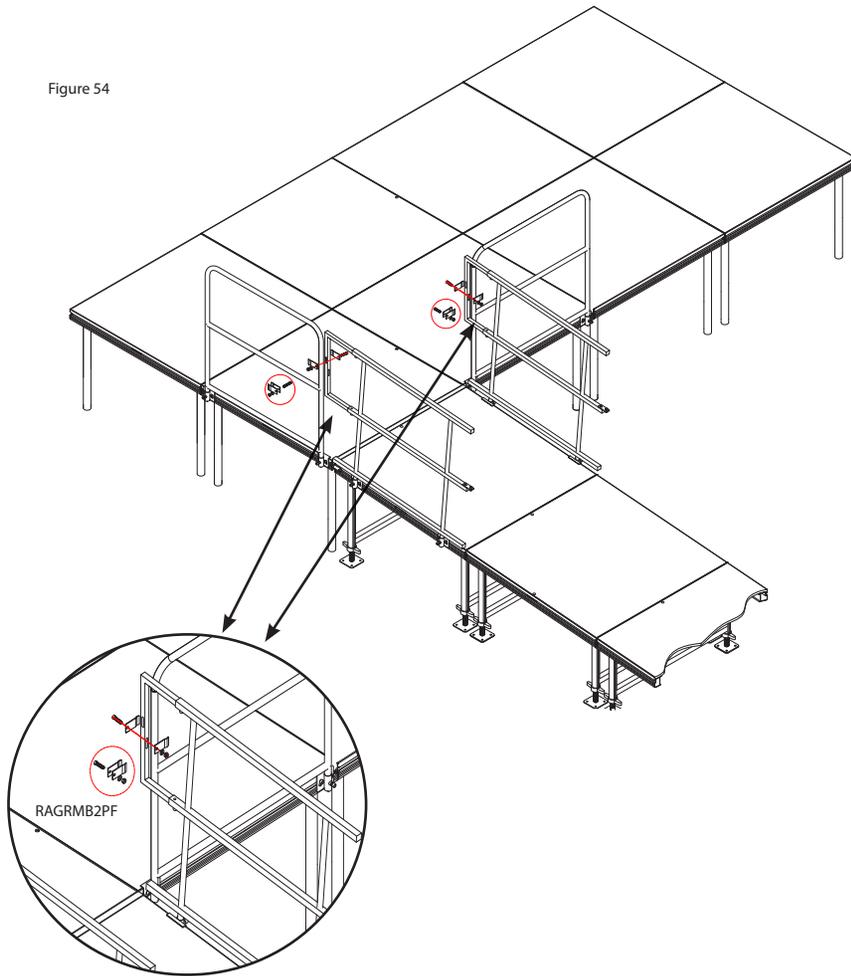

Secure RAGREW2ALL, RAGRD4 and PFGR4 with RAGRMB2PF hardware as shown in figure 54

Attach AT4GRS to stage platform as shown in figure 55 following directions from the All Terrain stage manual

Figure 55



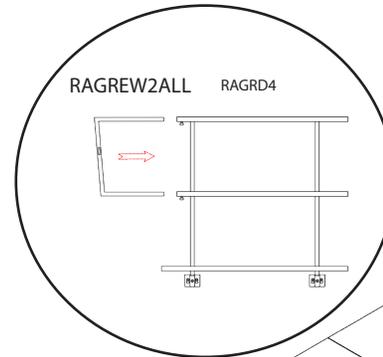



Figure 56

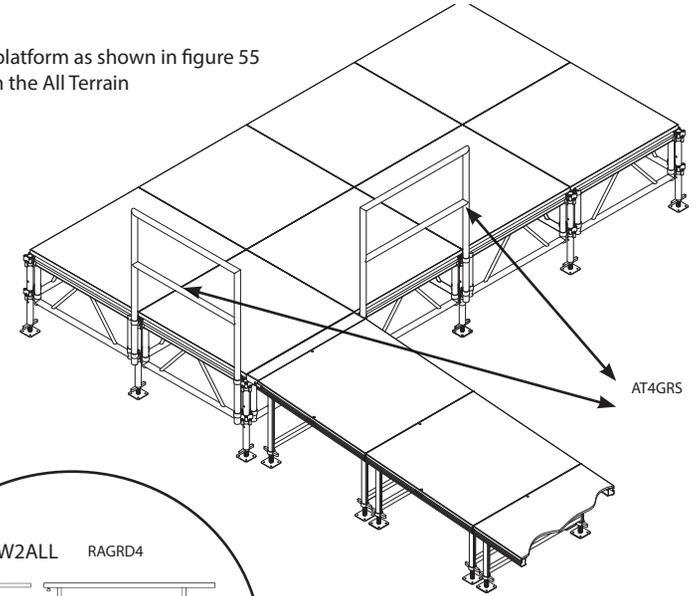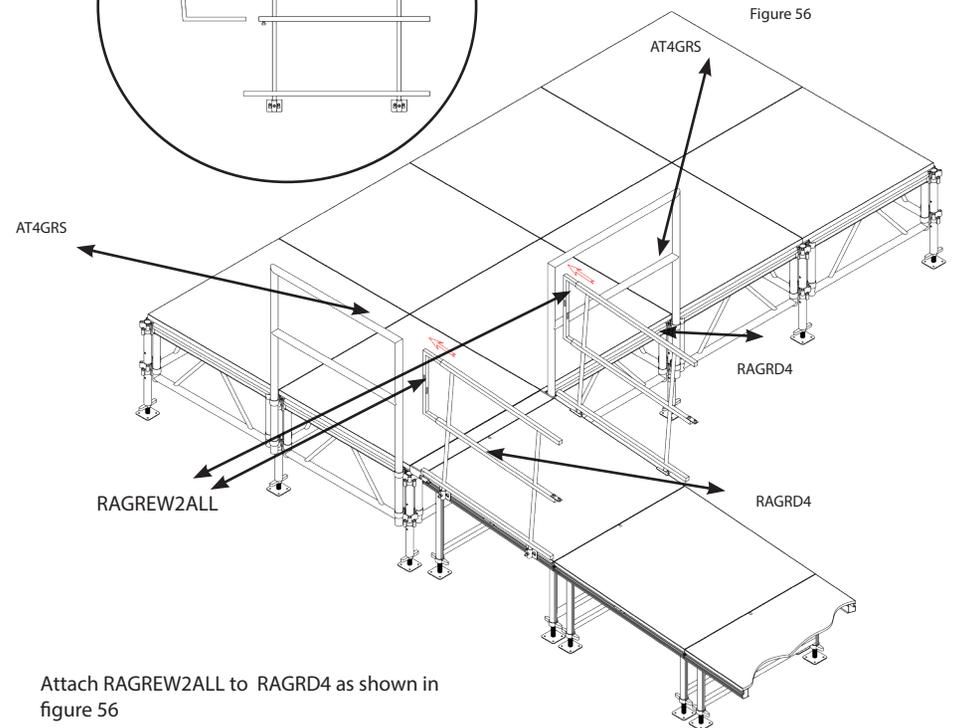

Attach RAGREW2ALL to RAGRD4 as shown in figure 56

GUARDRAILS ASSEMBLY FOR STAGING 101 STAGES

Figure 57

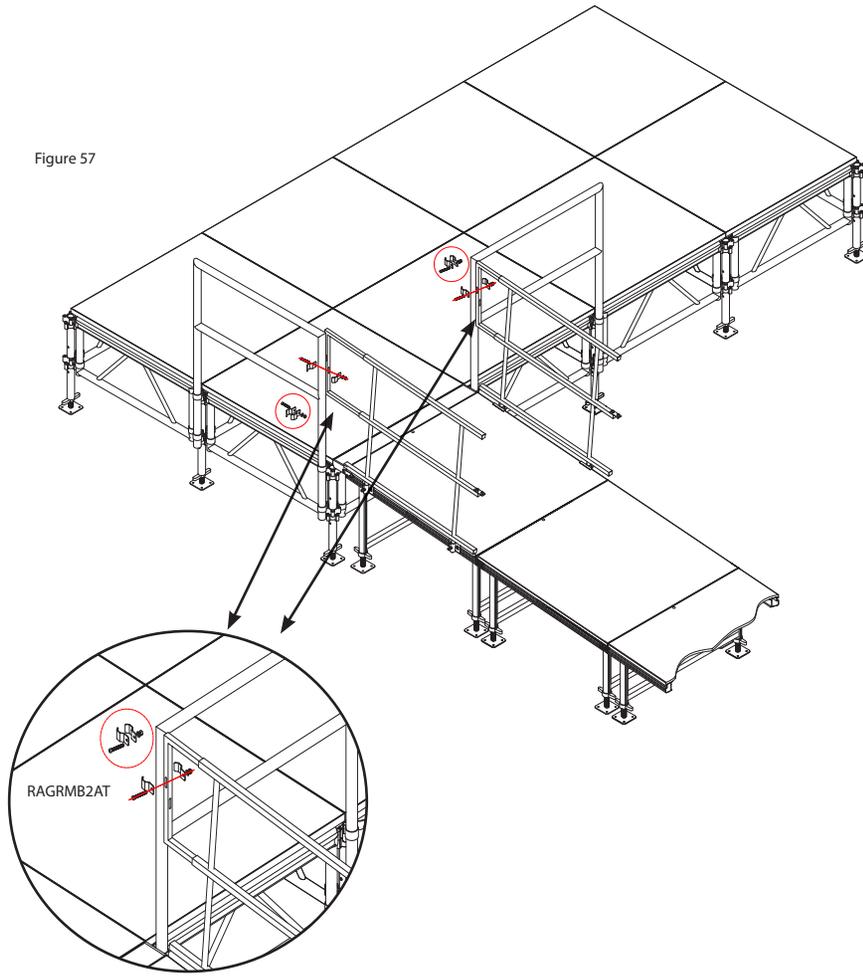

Secure RAGREW2ALL, RAGRD4 and RAGRD4 with RAGRMB2AT hardware as shown in figure 57

Attach SGRAIL4 to stage platform as shown in figure 58 following directions from the Staging 101 stage manual

Figure 58


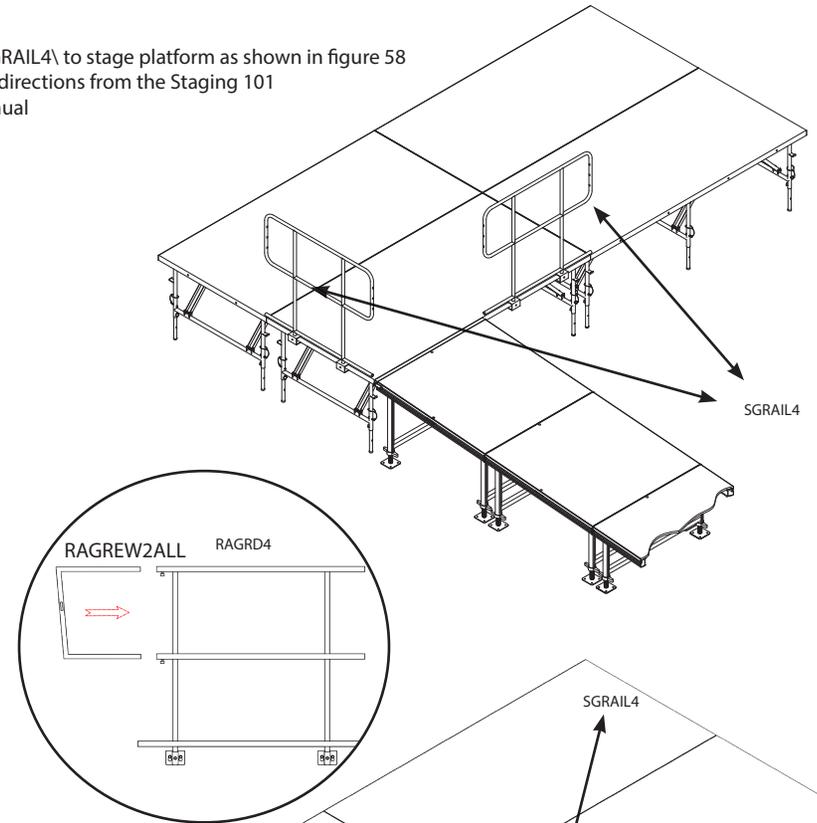


Figure 59

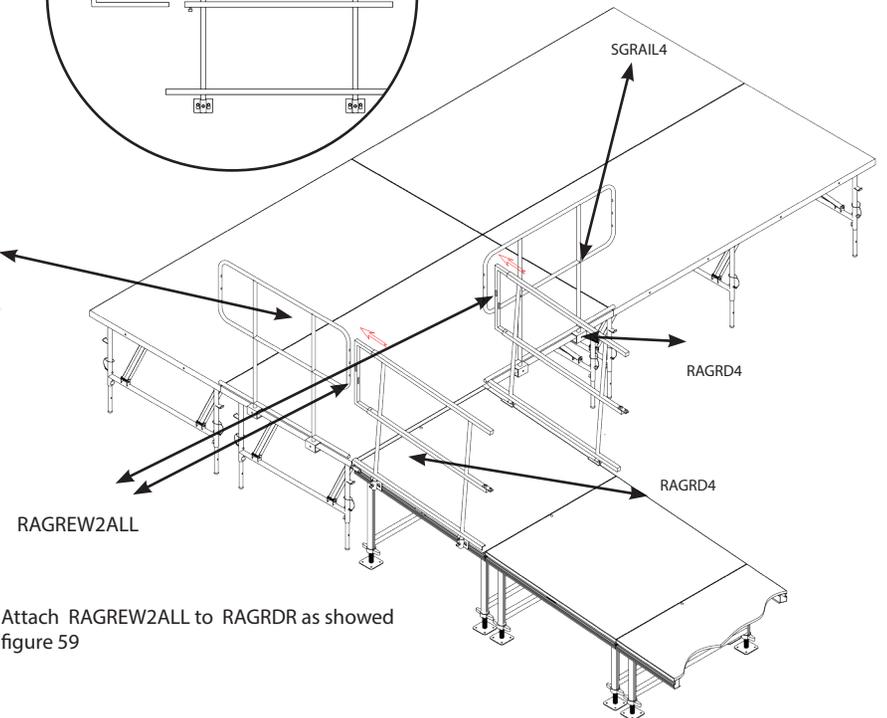

Attach RAGREW2ALL to RAGRDR as showed figure 59

RAMP MODELS AND CONFIGURATIONS

R8WI, R8WC, R8WAL

Wheelchair ramp with guardrail for 8 inches high stages
(guardrail not show)



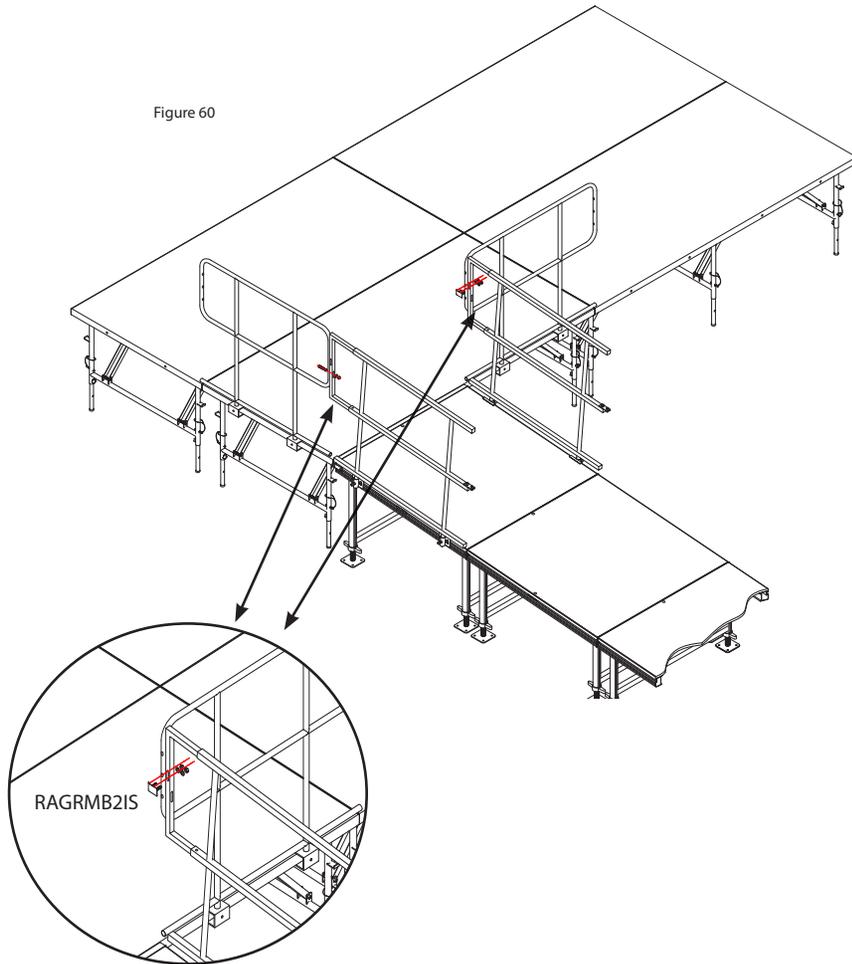


Figure 60

Secure RAGREW2ALL RAGR4 and IS4X4GRPD with RAGRMB2IS hardware as shown in figure 60


Top View:

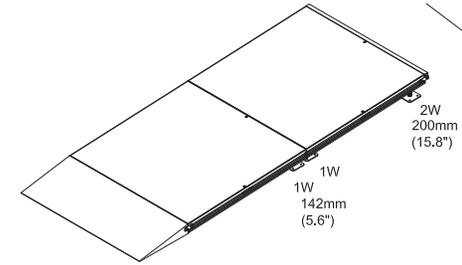

Top # - RAMP LEG NUMBER
Bottom# - STAGE HEIGHT ADJUSTMENT



⑩ RAGREW2ALL for IS,S101,PF,UNI guardrail
RAGRMB2IS for IS,S101 guardrail
RAGRMB2PF for PF,UNI guardrail

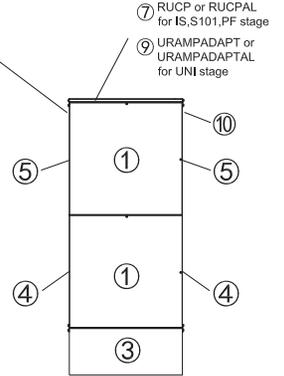


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W RL2W	Wheelchair ramp leg # 1 - leg base included Wheelchair ramp leg # 2 - leg base included	1 1	2 1
④ QLGRD4	Guardrails for 4x4 platform -dual pack	2	1
⑤ RAGR4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark: QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS UNIVERSAL STAGE:UNI	STAGING 101:S101	QL	IS	S101	PF	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish		1	1	1	1	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish						1
⑩ RAGREW2ALL RAGRMB2IS RAGRMB2PF	RAGR4 Guardrail Extension parts Connector securing ramp guardrail to IS & S101 stage Connector securing ramp guardrail to PF & UNI stage			1 1	1 1	1 1	1 1

R16WI, R16WC, R16WAL

Wheelchair ramp with guardrail for 16 inches high stages
(guardrail not show)

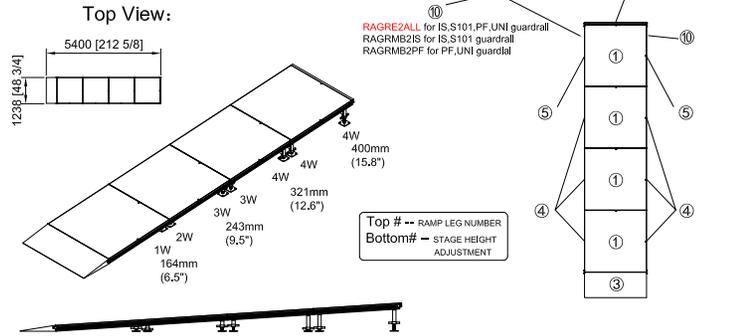

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	4
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W	Wheelchair ramp leg # 1 - leg base Included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base Included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	3
④ QLGRD4	Guardrails for 4x4 platform -dual pack	2	3
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS UNIVERSAL STAGE:UNI	STAGING 101:S101	QL	IS	S101	PF	UNI
⑦ RUCP or RUCPAL		4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish		1	1	1	1	
⑨ URAMPADAPT or URAMPADAPTAL		4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish						1
⑩ RAGRE2ALL RAGRMB2IS RAGRMB2PF		RAGRD Guardrail Extension parts Connector securing ramp guardrail to IS & S101 stage Connector securing ramp guardrail to PF & UNI stage			1	1	1	1

R16LWI, R16LWC, R16LWAL

Wheelchair ramp with landing and guardrail for 16 inches high stages
(guardrail not show)

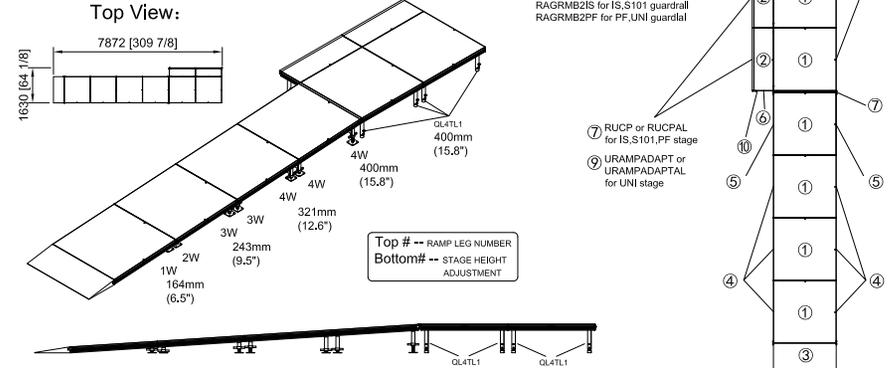

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	6
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W	Wheelchair ramp leg # 1 - leg base Included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base Included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base Included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base In separate box	1	3
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	4
④ QLGRD4	Guardrails for 4x4 platform - dual pack	2	4
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with RAGREW - dual pack	2	1
⑥ RASGRD	Adjustable guardrails for 4ftX15" ramp platform with RASGRE - dual pack	2	1

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS UNIVERSAL STAGE:UNI	STAGING 101:S101	QL	IS	S101	PF	UNI
⑦ RUCP or RUCPAL		4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish		1	3	3	3	1
⑨ URAMPADAPT or URAMPADAPTAL		4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish						2
⑩ RASGRE2ALL RAGRMB2IS RAGRMB2PF		RASGRD Guardrail Extension parts Connector securing ramp guardrail to IS & S101 stage Connector securing ramp guardrail to PF & UNI stage			1	1	1	1

R24WI, R24WC, R24WAL

Wheelchair ramp with guard rail for 24 inches high stages
(guardrail not show)

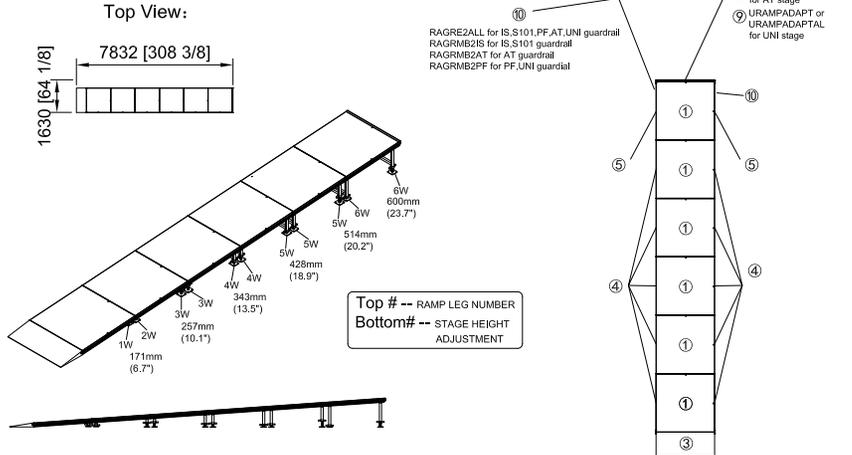

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	6
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W	Wheelchair ramp leg # 1 - leg base Included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base Included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base Included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base In separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base In separate box	1	3
RL6W	Wheelchair ramp leg # 6 - leg base In separate box	1	2
④ QLGRD4	Guardrails for 4x4 platform - dual pack	2	5
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with RAGREW - dual pack	2	1

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish			1	1	1	1		
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish							1	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish								1
⑩ RAGRE2ALL	RAGRD Guardrail Extension parts				1	1	1	1	1
RAGRMB2IS	Connector securing ramp guardrail to IS & S101 stage			1	1				
RAGRMB2AT	Connector securing ramp guardrail to AT stage						1		
RAGRMB2PF	Connector securing ramp guardrail to PF & UNI stage						1		1

R24LWI, R24LWC, R24LWAL

Wheelchair ramp with landing and guard rail for 24 inches high stages
(guardrail not show)

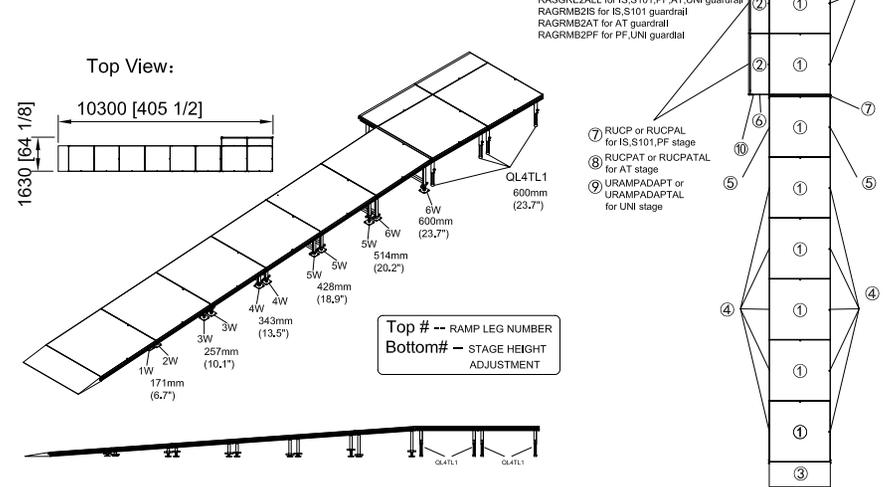

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	8
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base Included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base Included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base In separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base In separate box	1	3
RL6W	Wheelchair ramp leg # 6 - leg base In separate box	1	2
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	4
④ QLGRD4	Guardrails for 4x4 platform - dual pack	2	6
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with RAGREW - dual pack	2	1
⑥ RASGRD	Adjustable guardrails for 4ftx15" ramp platform with RASGRE - dual pack	2	1

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish			1	3	3	3	1	1
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish							2	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish								2
RASGR2ALL	RASGRD Guardrail Extension parts				1	1	1	1	1
RAGRMB2IS	Connector securing ramp guardrail to IS & S101 stage			1	1				
RAGRMB2AT	Connector securing ramp guardrail to AT stage							1	
RAGRMB2PF	Connector securing ramp guardrail to PF & UNI stage						1		1

R2490WI, R2490WC, R2490WAL

90 Degree turn wheelchair ramp with landing and guard rail for 24 inches high stages (guardrail not show)

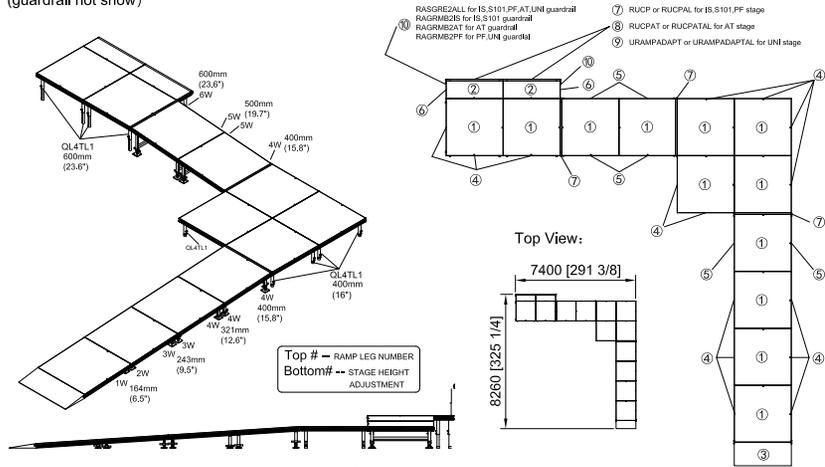


Main components

SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
QLP4C or ① QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	12
RPS4C or ② RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W RL2W RL3W RL4W RL5W RL6W QL4TL1	Wheelchair ramp leg # 1 - leg base included Wheelchair ramp leg # 2 - leg base included Wheelchair ramp leg # 3 - leg base included Wheelchair ramp leg # 4 - leg base in separate box Wheelchair ramp leg # 5 - leg base in separate box Wheelchair ramp leg # 6 - leg base in separate box Telescopic leg adjustable from 16" to 24"	1 1 1 1 1 1 4	1 1 2 4 2 1 8
④ QLGRD4 QLGRS4	Guardrails for 4x4 platform -dual pack Guardrails for 4x4 platform - single pack	2 1	7 1
⑤ RAGR4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
⑥ RASGRD	Adjustable guardrails for 4ftx15" ramp platform with clamp and mounting hardware	2	1
Selected according to the situation			
remark: QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL IS S101 PF AT UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish	3	5 5 3 3
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel - Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish		2
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish		2
RASGRE2ALL RAGRMB2IS RAGRMB2AT RAGRMB2PF	RASGRD Guardrail Extension parts Connector securing ramp guardrail to IS & S101 stage Connector securing ramp guardrail to AT stage Connector securing ramp guardrail to PF & UNI stage	1 1	1 1 1 1 1 1 1 1 1 1

R24SBWI, R24SBWC, R24SBWAL

Switch back wheelchair ramp with landing and guard rail for 24 inches high stages (guardrail not show)

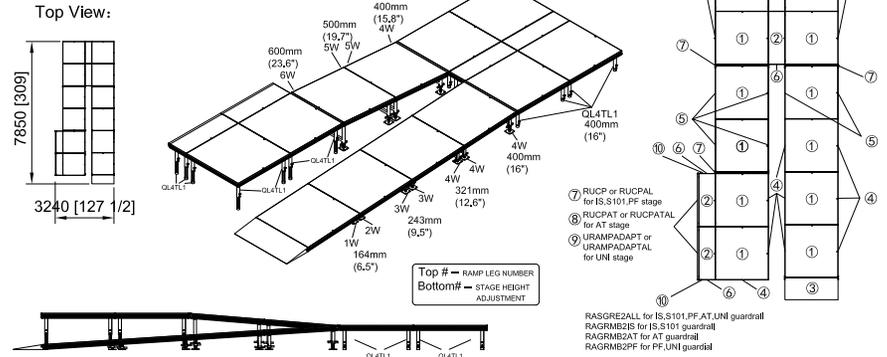


Main components

SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	12
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	4
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W RL2W RL3W RL4W RL5W RL6W QL4TL1	Wheelchair ramp leg # 1 - leg base included Wheelchair ramp leg # 2 - leg base included Wheelchair ramp leg # 3 - leg base included Wheelchair ramp leg # 4 - leg base in separate box Wheelchair ramp leg # 5 - leg base in separate box Wheelchair ramp leg # 6 - leg base in separate box Telescopic leg adjustable from 16" to 24"	1 1 1 1 1 1 4	1 1 2 4 2 1 10
④ QLGRD4 QLGRS4	Guardrails for 4x4 platform -dual pack Guardrails for 4x4 platform - single pack	2 1	7 1
⑤ RAGR4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
⑥ RASGRD	Adjustable guardrails for 4ftx15" ramp platform with clamp and mounting hardware	2	2
Selected according to the situation			
remark: QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL IS S101 PF AT UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish	3	5 5 3 3
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish		2
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish		2
RASGRE2ALL RAGRMB2IS RAGRMB2AT RAGRMB2PF	RASGRD Guardrail Extension parts Connector securing ramp guardrail to IS & S101 stage Connector securing ramp guardrail to AT stage Connector securing ramp guardrail to PF & UNI stage	1 1	1 1 1 1 1 1 1 1 1 1

R32LWI, R32LWC, R32LWAL

Wheelchair ramp with landing and guard rail for 32 inches high stages
(guardrail not show)

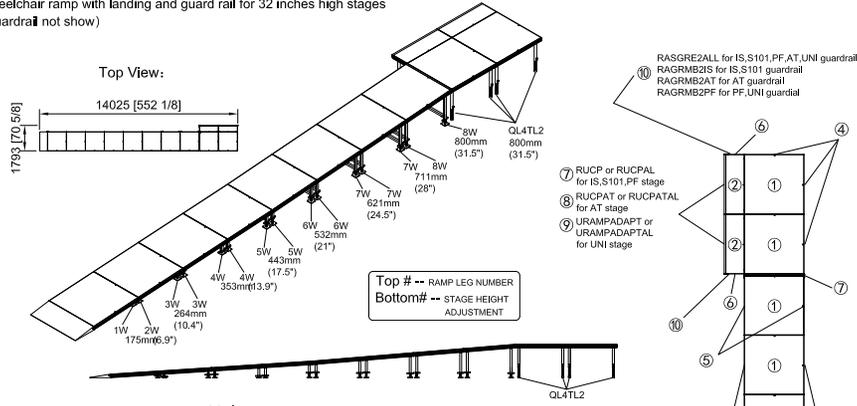


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	10
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	2
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	2
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	3
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	2
QL4TL2	Telescopic leg adjustable from 24" to 32"	4	4
④ QLGRD4	Guardrails for 4x4 platform -dual pack	2	8
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	1
⑥ RASGRD	Adjustable guardrails for 4ftx15" ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark: QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish		1	3	3	3	1	1
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish						2	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish							2
⑩ RASGRE2ALL RAGRMB2IS RAGRMB2AT RAGRMB2PF	RASGRD Guardrail Extension parts Connector securing ramp guardrail to IS & S101 stage Connector securing ramp guardrail to AT stage Connector securing ramp guardrail to PF & UNI stage		1 1	1 1	1 1	1 1	1 1	1 1

R3290WI, R3290WC, R3290WAL

90 Degree turn wheelchair ramp with landing and guard rail for 32 inches high stages
(guardrail not show)

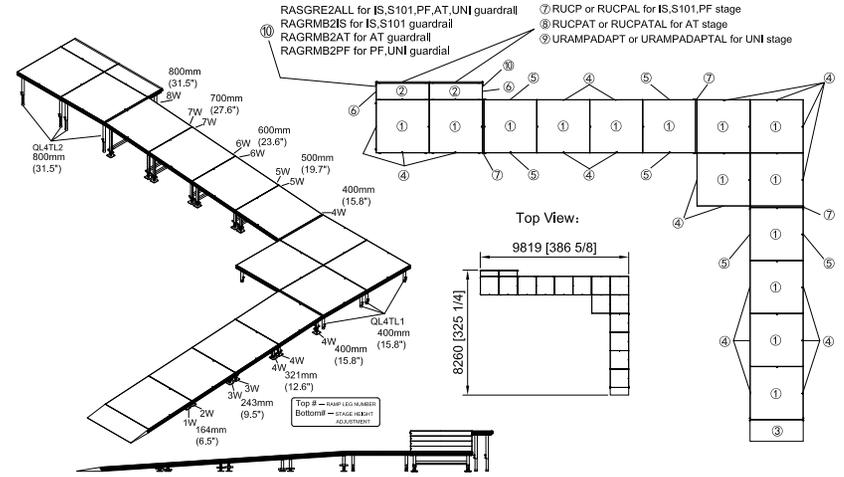


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	14
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	4
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	2
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	2
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	1
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	4
QL4TL2	Telescopic leg adjustable from 24" to 32"	4	4
④ QLGRD4	Guardrails for 4x4 platform -dual pack	2	9
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
⑥ RASGRD	Adjustable guardrails for 4ftx15" ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark: QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish		3	5	5	5	3	3
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish						2	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish							2
RASGRE2ALL RAGRMB2IS RAGRMB2AT RAGRMB2PF	RASGRD Guardrail Extension parts Connector securing ramp guardrail to IS & S101 stage Connector securing ramp guardrail to AT stage Connector securing ramp guardrail to PF & UNI stage		1 1	1 1	1 1	1 1	1 1	1 1

R32SBWI, R32SBWC, R32SBWAL

Switch back wheelchair ramp with landing and guard rail for 32 inches high stages (guardrail not show)

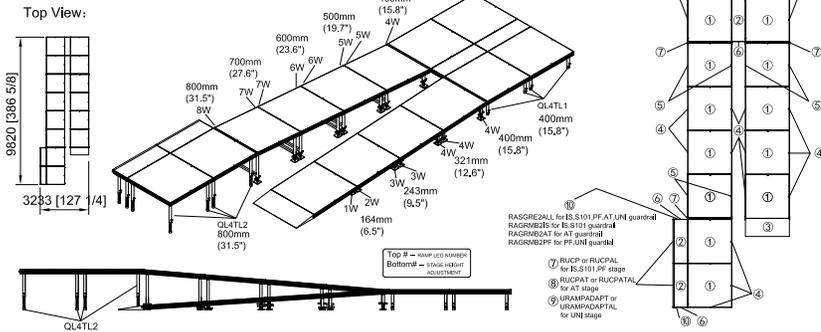

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	14
RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	4
RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	4
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	2
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	2
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	1
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	6
QL4TL2	Telescopic leg adjustable from 24" to 32"	4	4
QLGRD4	Guardrails for 4x4 platform -dual pack	2	9
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
RASGRD	Adjustable guardrails for 4ftX15" ramp platform with clamp and mounting hardware	2	2

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish			3	5	5	5	3	3
RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish							2	
URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish								2
RASGRE2ALL	RASGRD Guardrail Extension parts				1	1	1	1	1
RAGRMB2IS	Connector securing ramp guardrail to IS & S101 stage				1	1			
RAGRMB2AT	Connector securing ramp guardrail to AT stage							1	
RAGRMB2PF	Connector securing ramp guardrail to PF & UNI stage						1		1

R40LWI, R40LWC, R40LWAL

Wheelchair ramp with landing and guard rail for 40 inches high stages (guardrail not show)

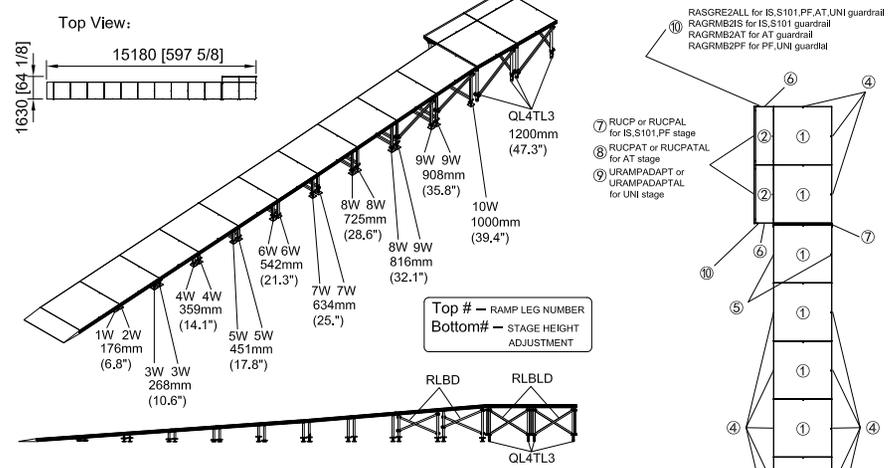

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	12
RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RLBD	4ft Ramp legs side bars	2	2
RLBLD	4ft Ramp legs side longer bars	2	6
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	2
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	2
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	3
RL9W	Wheelchair ramp leg # 9 - leg base in separate box	1	3
RL10W	Wheelchair ramp leg # 10 - leg base in separate box	1	1
QL4TL3	Telescopic leg adjustable from 40" to 48"	4	4
QLGRD4	Guardrails for 4x4 platform -dual pack	2	10
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	1
RASGRD	Adjustable guardrails for 4ftX15" ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish			1	3	3	3	1	1
RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish							2	
URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish								2
RASGRE2ALL	RASGRD Guardrail Extension parts				1	1	1	1	1
RAGRMB2IS	Connector securing ramp guardrail to IS & S101 stage				1	1			
RAGRMB2AT	Connector securing ramp guardrail to AT stage							1	
RAGRMB2PF	Connector securing ramp guardrail to PF & UNI stage						1		1

R4090WI, R4090WC, R4090WAL

90 Degree turn wheelchair ramp with landing and guard rail for 40 inches high stages
(guardrail not show)

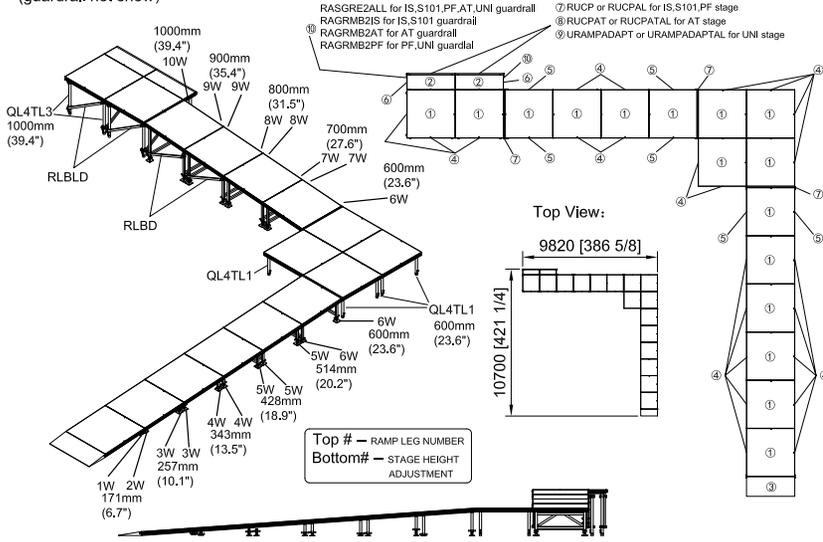

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	16
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RLBD	4ft Ramp legs side bars	2	2
RLBLD	4ft Ramp legs side longer bars	2	6
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	3
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	3
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	2
RL9W	Wheelchair ramp leg # 9 - leg base in separate box	1	2
RL10W	Wheelchair ramp leg # 10 - leg base in separate box	1	1
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	4
QL4TL3	Telescopic leg adjustable from 40" to 48"	4	4
④ QLGRD4	Guardrails for 4x4 platform - dual pack	2	11
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
⑥ RASGRD	Adjustable guardrails for 4ftx15" ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	IS	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL					3	5	5	5	3	3
⑧ RUCPAT or RUCPATAL									2	
⑨ URAMPADAPT or URAMPADAPTAL										2
⑩ RASGREZALL RAGRMB2IS RAGRMB2AT RAGRMB2PF						1	1	1	1	1
						1	1		1	1
								1		1
									1	1

R40SBWI, R40SBWC, R40SBWAL

Switch back wheelchair ramp with landing and guard rail for 40 inches high stages
(guardrail not show)

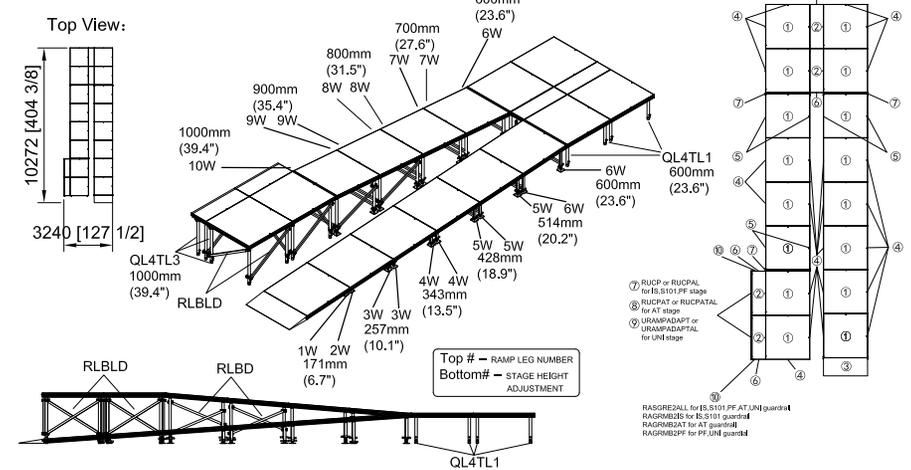

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	16
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	4
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RLBD	4ft Ramp legs side bars	2	2
RLBLD	4ft Ramp legs side longer bars	2	6
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	3
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	3
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	2
RL9W	Wheelchair ramp leg # 9 - leg base in separate box	1	2
RL10W	Wheelchair ramp leg # 10 - leg base in separate box	1	1
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	6
QL4TL3	Telescopic leg adjustable from 40" to 48"	4	4
④ QLGRD4	Guardrails for 4x4 platform - dual pack	2	11
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
⑥ RASGRD	Adjustable guardrails for 4ftx15" ramp platform with clamp and mounting hardware	2	2

Selected according to the situation

remark:	QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	IS	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL					3	5	5	5	3	3
⑧ RUCPAT or RUCPATAL									2	
⑨ URAMPADAPT or URAMPADAPTAL										2
⑩ RASGREZALL RAGRMB2IS RAGRMB2AT RAGRMB2PF						1	1	1	1	1
						1	1		1	1
								1		1
									1	1

R48LWI, R48LWC, R48LWAL

Wheelchair ramp with landing and guard rail for 48 inches high stages
(guardrail not show)

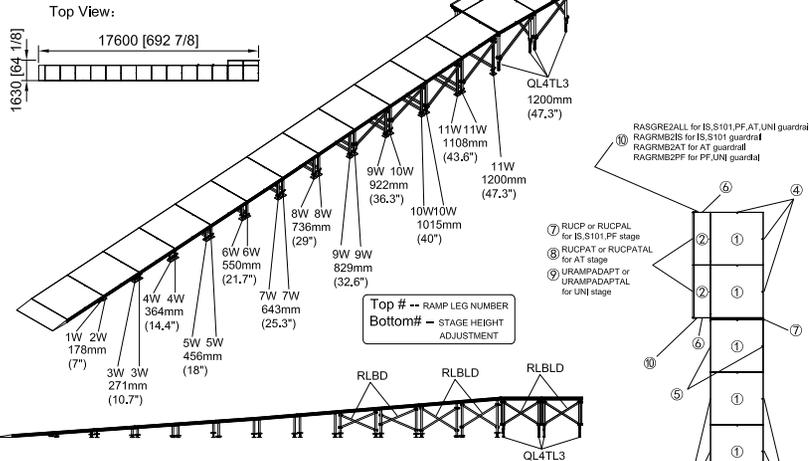

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	14
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RLBD	4ft Ramp legs side bars	2	2
RLBLD	4ft Ramp legs side longer bars	2	8
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	2
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	2
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	2
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	2
RL9W	Wheelchair ramp leg # 9 - leg base in separate box	1	3
RL10W	Wheelchair ramp leg # 10 - leg base in separate box	1	3
RL11W	Wheelchair ramp leg # 11 - leg base in separate box	1	3
QL4TL3	Telescopic leg adjustable from 40" to 48"	4	4
④ QLGRD4 QLGRS4	Guardrails for 4x4 platform -dual pack Guardrails for 4x4 platform - single pack	2 1	12 1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	1
⑥ RASGRD	Adjustable guardrails for 4ftX15" ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark: QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish		1	3	3	3	1	1
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish						2	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish							2
RASGREZALL	RASGRD Guardrail Extension parts			1	1	1	1	1
⑩ RAGRMB2IS	Connector securing ramp guardrail to IS & S101 stage			1	1			
RAGRMB2AT	Connector securing ramp guardrail to AT stage					1	1	
RAGRMB2PF	Connector securing ramp guardrail to PF & UNI stage					1		1

R4890WI, R4890WC, R4890WAL

90 Degree turn wheelchair ramp with landing and guard rail for 48 inches high stages
(guardrail not show)

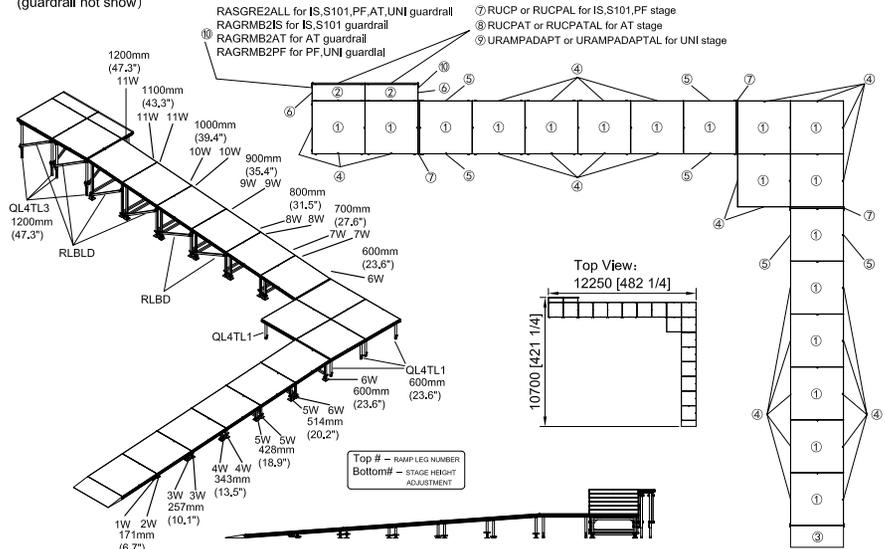

Main components


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	18
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	2
③ RBP or RBPAL	4ft Metal ramp bottom plate with mounting hardware 4ft Aluminum ramp bottom plate with mounting hardware	1	1
RLBD	4ft Ramp legs side bars	2	2
RLBLD	4ft Ramp legs side longer bars	2	8
RL1W	Wheelchair ramp leg # 1 - leg base included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	3
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	3
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	2
RL9W	Wheelchair ramp leg # 9 - leg base in separate box	1	2
RL10W	Wheelchair ramp leg # 10 - leg base in separate box	1	2
RL11W	Wheelchair ramp leg # 11 - leg base in separate box	1	3
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	4
QL4TL3	Telescopic leg adjustable from 40" to 48"	4	4
④ QLGRD4 QLGRS4	Guardrails for 4x4 platform -dual pack Guardrails for 4x4 platform - single pack	2 1	13 1
⑤ RAGRD4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
⑥ RASGRD	Adjustable guardrails for 4ftX15" ramp platform with clamp and mounting hardware	2	1

Selected according to the situation

remark: QUICK LOCK: QL PROFLEX :PF	INTELLISTAGE: IS ALL TERRAIN:AT	STAGING 101:S101 UNIVERSAL STAGE:UNI	QL	IS	S101	PF	AT	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish		3	5	5	5	3	3
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish						2	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish							2
RASGREZALL	RASGRD Guardrail Extension parts			1	1	1	1	1
⑩ RAGRMB2IS	Connector securing ramp guardrail to IS & S101 stage			1	1			
RAGRMB2AT	Connector securing ramp guardrail to AT stage					1	1	
RAGRMB2PF	Connector securing ramp guardrail to PF & UNI stage					1		1

R48SBWI, R48SBWC, R48SBWAL

Switch back wheelchair ramp with landing and guard rail for 48 inches high stages
(guardrail not show)

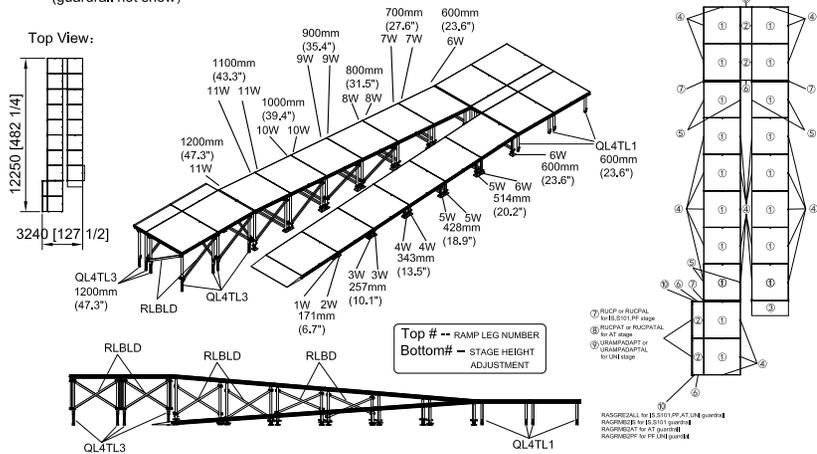

Main components

SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
① QLP4C or QLP4I or QLP4AL	4 ft x 4 ft Carpet Finish platform 4 ft x 4 ft Industrial Finish platform 4 ft x 4 ft Aluminum Finish platform	1	18
② RPS4C or RPS4I or RPS4AL	4 ft x 15" Carpet Finish platform 4 ft x 15" Industrial Finish platform 4 ft x 15" Aluminum Finish platform	1	4
③ RBP or RBPAL	4R Metal ramp bottom plate with mounting hardware 4R Aluminum ramp bottom plate with mounting hardware	1	1
RLBD	4ft Ramp legs side bars	2	2
RLBLD	4ft Ramp legs side longer bars	2	8
RL1W	Wheelchair ramp leg # 1 - leg base Included	1	1
RL2W	Wheelchair ramp leg # 2 - leg base Included	1	1
RL3W	Wheelchair ramp leg # 3 - leg base included	1	2
RL4W	Wheelchair ramp leg # 4 - leg base in separate box	1	2
RL5W	Wheelchair ramp leg # 5 - leg base in separate box	1	3
RL6W	Wheelchair ramp leg # 6 - leg base in separate box	1	3
RL7W	Wheelchair ramp leg # 7 - leg base in separate box	1	2
RL8W	Wheelchair ramp leg # 8 - leg base in separate box	1	2
RL9W	Wheelchair ramp leg # 9 - leg base in separate box	1	2
RL10W	Wheelchair ramp leg # 10 - leg base in separate box	1	2
RL11W	Wheelchair ramp leg # 11 - leg base in separate box	1	3
QL4TL1	Telescopic leg adjustable from 16" to 24"	4	6
QL4TL3	Telescopic leg adjustable from 40" to 48"	4	4
④ QLGRD4	Guardrails for 4x4 platform -dual pack	2	13
QLGRS4	Guardrails for 4x4 platform - single pack	1	1
⑤ RAGR4	Adjustable guardrails for 4ft ramp platform with clamp and mounting hardware	2	3
⑥ RASGRD	Adjustable guardrails for 4RX15" ramp platform with clamp and mounting hardware	2	2

Selected according to the situation

remark:	QUICK LOCK: QL	INTELLISTAGE: IS	STAGING 101S101	PF	AT	UNI
⑦ RUCP or RUCPAL	4ft ramp to stage connecting panel -Metal Finish 4ft ramp to stage connecting panel -Aluminum Finish	3	5	5	3	3
⑧ RUCPAT or RUCPATAL	4ft ramp to All Terrain stage connecting panel -Industrial Finish 4ft ramp to All Terrain stage connecting panel -Aluminum Finish				2	
⑨ URAMPADAPT or URAMPADAPTAL	4ft ramp to Universal stage connecting panel -Metal Finish 4ft ramp to Universal stage connecting panel -Aluminum Finish					2
RASGRZALL	RASGRD Guardrail Extension parts	1	1	1	1	1
⑩ RAGRMB2IS	Connector securing ramp guardrail to IS & S101 stage	1	1			
RAGRMB2AT	Connector securing ramp guardrail to AT stage			1	1	
RAGRMB2PF	Connector securing ramp guardrail to PF & UNI stage			1		1

.....